 


900W - 1500W PTC HEATER

AP0105 | AP0106

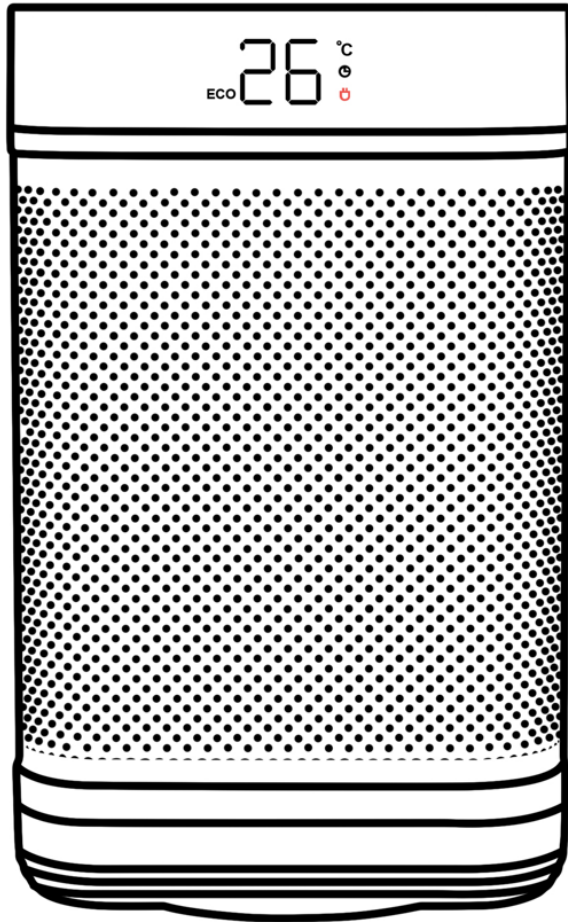

Please keep this manual safe for future reference!

Thank you for your purchase of our PTC Heater.

Be sure to read this manual carefully before using your
new product.

If assistance is required, please contact our support team
via the channel of purchase



CONTENTS PAGE

PRODUCT SPECIFICATIONS

SAFETY INSTRUCTIONS

PRODUCT OVERVIEW

CONTROL FUNCTIONS

OPERATING INSTRUCTIONS

DEVICE SAFETY

CLEANING & STORAGE

FAQS

PRODUCT SPECIFICATIONS

Model No.	AP0105 AP0106
Voltage/Frequency	220V / 50-60Hz
Rated Power (W)	900 - 1500
Dimensions (cm)	16 x 14 x 24
Weight (kg)	1.5
Oscillation	Left & Right Swing - 90°C
Noise Level	58 > dB
Safety Features	Overheat & Tip Over Protection
Mode Options	LOW (900W) HIGH (1500W) ECO (900/1500W) FAN MODE
Timer	Up to 12h
Remote Control Included?	Y
Temperature Range	15°C – 45°C

SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be used to reduce the risk of fire, electric shock or personal injury, including the following:

1. DO NOT PLUG THIS HEATER INTO AN EXTENSION CORD / ADAPTER. TO AVOID ANY RISK OF FIRE, ALWAYS USE DIRECTLY FROM A WALL MAINS SOCKET.

2. The surface of this heater will become hot during use. To avoid burns, do not touch the hot surfaces with bare hands. When moving, ensure to hold the recessed carrying handle at the back of the unit and to wait an adequate amount of time after use for the item to properly cool down.

3. This unit operates at a high temperature. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 1 meter (3 foot) away from the front and top of the heater. Don't place anything close to the sides or rear of the heater. Do not place anything over the heater which will cover the unit.

4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by the person responsible for their safety.

5. Do not allow the unit to be used as a toy. Close attention and supervision is necessary when using this item near children. Children should be supervised to ensure that they do not play with the machine or remote control.
6. Always unplug the heater when not in use.
7. Do not operate the heater if the cord or plug is damaged, or if the heater malfunctions, is dropped, or damaged in any manner. Instead, discard the heater, or return it to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
8. Do not use outdoors, or on wet surfaces.
9. Do not handle any part of the plug or machine with wet hands.
10. Suitable for dry locations ONLY. This heater is not intended for use in bathroom, laundry areas, and similar indoor locations . For example, never place the heater where it may fall into a bathtub or other water container. Likewise, please do not use or store where it may get wet or in the bathroom's immediate surroundings, a shower, or a swimming pool.
11. Do not run the power cord under carpeting. Do not cover the cable with throws rugs, runners, or any similar item.

12. Do not route the cable under furniture or appliances. Instead, arrange the cable away from any area where it may be tripped over.

13. To disconnect the heater, turn it off first, then proceed to remove the plug from the power outlet.

14. Only connect to properly grounded outlets.

15. Do not insert or allow foreign objects to enter any ventilation or exhaust opening on the device - this may cause electric shock, fire, or damage to the heater.

16. To prevent a possible fire, do not use if any opening or exhaust is blocked and ensure to keep free of dust, lint, hair, and anything that may reduce the level of airflow to the unit.

17. The heater has parts that can spark inside. Please do not use it in areas where gasoline, paint, or flammable gasses or liquids are used or stored.

18. Use this heater only as described in this User Guide. Any other use not recommended by the manufacturer may cause fire, electric shock, personal injury, or further property damage.

19. To prevent electrical overload and blown fuses, be sure that no other appliance is plugged into the same power outlet (receptacle) or another outlet (receptacle) wired into the same circuit.

20.If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.

21.It is normal for the plug and cord to feel warm to the touch. A plug or cord that becomes hot to the touch or becomes distorted in shape may result from a worn electrical outlet. Worn outlets or receptacles should be replaced before further use of the heater. Plugging the heater into a worn outlet / receptacle may result in overheating of the power cord or fire.

22.The output of this heater may vary and its temperature may become intense enough to burn exposed skin. Use of this heater is not recommended for persons with reduced sensitivity to heat or an inability to react to avoid burns.

23.Ensure the heater is on a stable, secure surface to eliminate the potential of tipping it over.

24.Be sure that the plug is fully inserted into an appropriate receptacle. Please remember that receptacles also deteriorate due to aging and continuous use: check periodically for signs of overheating or deformations evidenced by the plug. Do not use the receptacle and CALL an electrician to examine if required.

25.Check that neither the appliance nor the power cable has been damaged in any way during transportation.

26.Ensure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It is recommended to go over the appliance with a vacuum cleaner prior to use.

27.Do not attempt to modify or repair the product by yourself. Doing so could void the warranty and cause damage or personal injury. Only a qualified repair technician may disassemble or repair this product.

28.Choking hazard – This remote-control unit contains a small battery. Keep the remote control away from children, and do not swallow the battery. If the battery is swallowed, seek medical advice immediately.

29.If the machine is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use it.

30.Before cleaning, storage, or when not in use, always turn the heater OFF and unplug it from the electrical outlet and allow it to cool.

31. The heater must not be located immediately below a socket-outlet

32. In order to avoid overheating, do not cover the heater.

 
33. Keep the air inlet and outlet free from objects: at least 1 m in front and 50 cm behind the heater.

34. Do NOT leave the unit in operation unattended.

35. **NOTE:** There may be a trace of smoke or odour when the unit is first operated. This indicates that a drop of oil has fallen on the heating coil during the manufacturing process. It will quickly evaporate and should not re-occur.


36. **NOTE:** You may notice a slight sound when the machine is turned on or off, this is due to the material expanding when heated and contracting when cooled. Do not be alarmed - This is normal and to be expected.


PRODUCT OVERVIEW

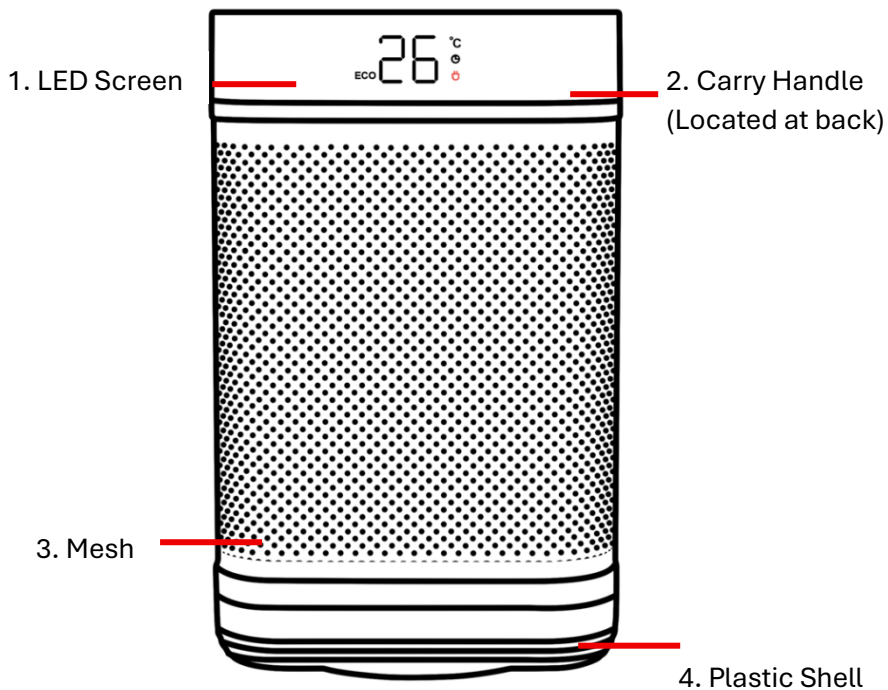

On the display Indicates that the item is connected to a power source and the tip over safety is engaged.

  CONTROL FUNCTIONS

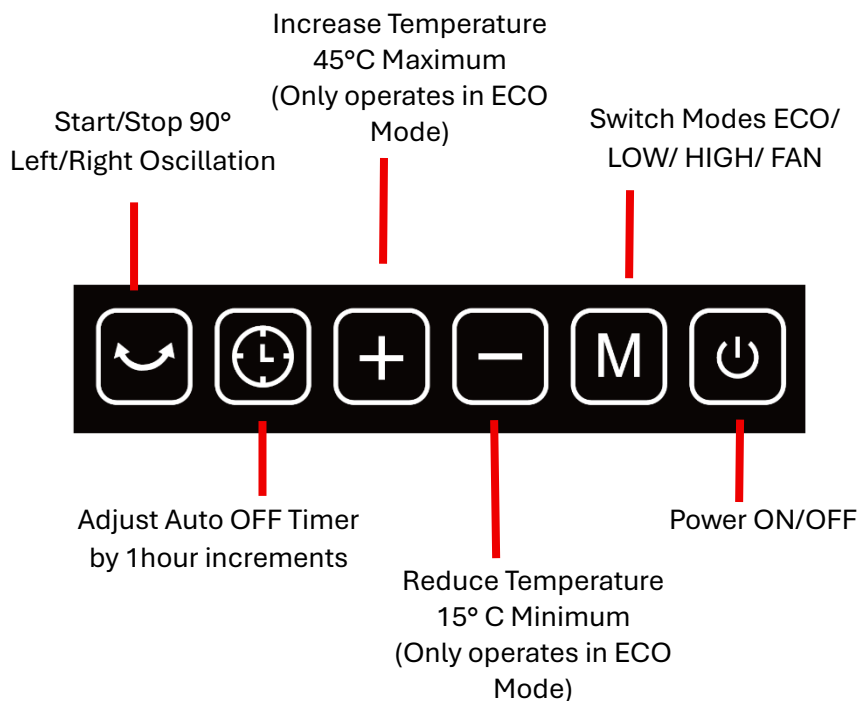

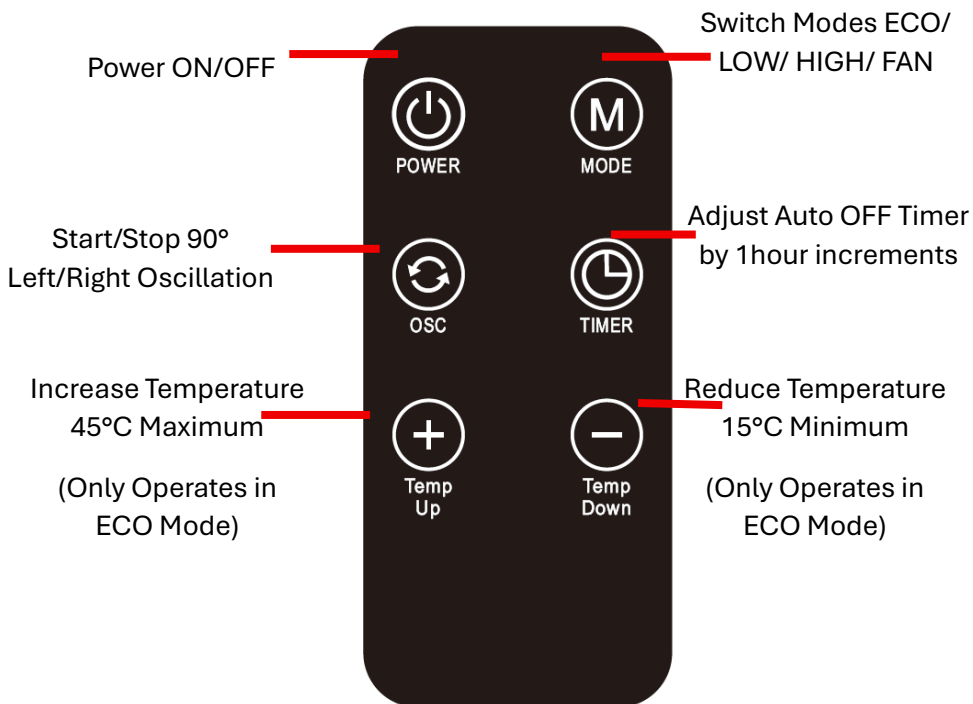

OPERATING INSTRUCTIONS

Place the heater on a firm, level, open surface which is free from obstructions and at least 3ft (1m) away from any wall or combustible material

DO NOT use on an unstable surface such as bedding or deep carpeting.

BE SURE THE HEATER IS NOT IN A POSITION WHERE IT MAY BE TRIPPED OVER BY CHILDREN OR PETS.

Plug into an appropriate voltage AC outlet.

This product is equipped with a thermostat, 12-hour timer and the function to horizontally oscillate 90°

Power ON/OFF

Press  on the heater or remote control once to power ON the heater screen. The room temperature in °C will be displayed on the LED display.

Pressing  once again on the heater or remote will turn the heater OFF.

Heat Modes

This product has 3 Heating Modes of “Low” (900W) “High” (1500W) & “ECO” (900/1500W) as well as an additional fan function.

When the Unit is ON, Press  to switch between the 4 different modes.

When **ECO** is displayed on the product display, the heater is in ECO Mode and the temperature +/- buttons are adjustable to select a desired target room temperature. The device will operate in HIGH mode (1500W) until the target temperature is achieved.

Once the room temperature has achieved the set target, the heater will then reduce its output to LOW mode (900W) and continue heating.

If the device detects the room temperature has dropped below the selected target temperature by more than 2°C, the heater will automatically switch back to HIGH mode to heat the room back to the desired target temperature.

When  is displayed on the product display, the heater is in LOW mode and will operate continuously at 900W.

When  is displayed on the product display, the heater is in HIGH mode, and will operate continuously at 1500W

When  is displayed on the product display, the heater is in FAN mode, and will NOT heat. The device will blow out cool air.

Important Note: The Temperature +/- buttons will only work when the device is set to ECO mode. When operating in LOW or HIGH modes, the heating output is at a pre-set level and you are unable to adjust the temperature target.

 
DEVICE SAFETY

This product is fitted with two main safety features:

Tip Over Protection


When the heater is tipped forwards or backwards, or is accidentally knocked down, the automatic tip-over cut off switch will activate and switch the heater off automatically.

After the device is tipped over and cut out, simply pick it back up and place on a flat surface and press the power button and select the desired mode to start using once again.

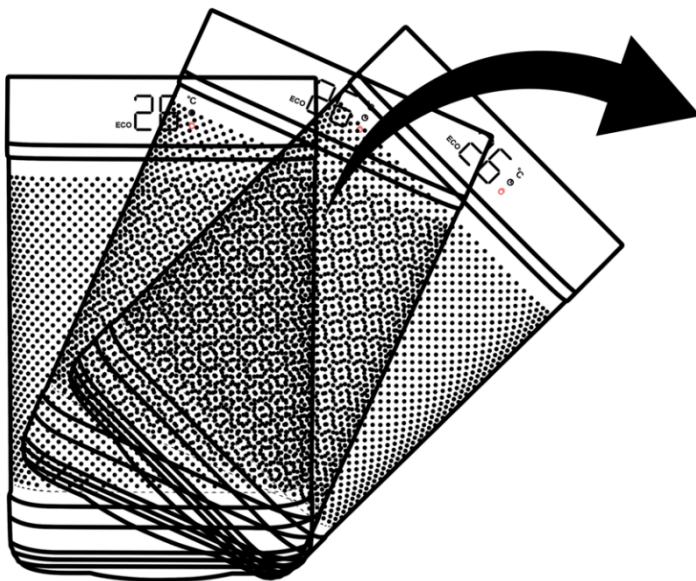

Overheat Protection

 The automatic overheat protection system will shut the unit off if it is detected that parts of the heater are overheating.

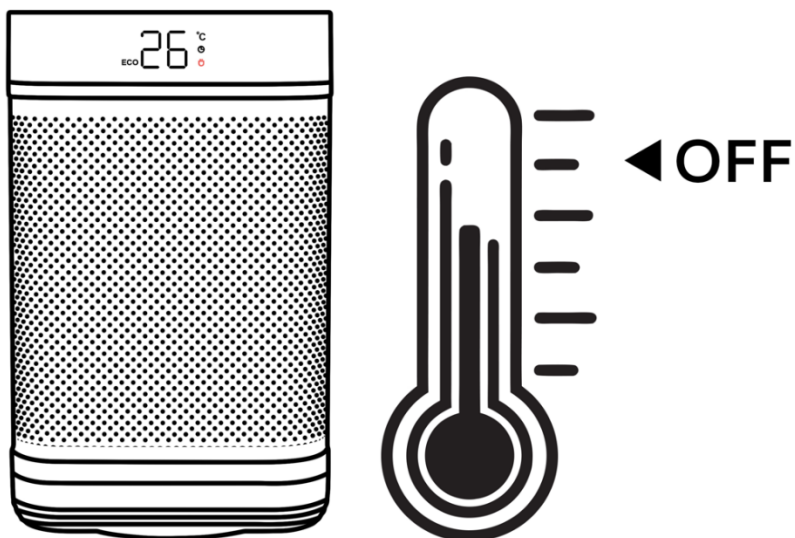

CLEANING & STORAGE

We recommend this heater to be cleaned at least once a month, and before putting away in storage for the off-season. To clean, please follow the instructions overleaf.

1. Ensure the heater is cool, off and unplugged from the mains power source.
2. Use a dry cloth to clean the external surfaces of the heater.

Note: DO NOT use water, wax, polish or any other chemical solution to clean the device.
3. Pack the heater in its original packaging and store in a cool, dry place, out of direct sunlight.
4. Please NEVER disassemble the heater.

FAQS

1. How much power does the unit use on each setting?
 - a. LOW 900W | HIGH 1500W | ECO 900-1500W
2. There is a peculiar smell when using the device
 - a. When first receiving your product, this is to be expected. The smell will disappear with use. We recommend to use the item in a well-ventilated setting on the first uses.
3. Why isn't the temperature adjusting?
 - a. You are only able to adjust the temperature target when in **ECO** Mode. When in HIGH or LOW mode, the device output is at a pre-set level and is not adjustable.

4. Why is the heater blowing out cold air?
 - a. When in fan mode, the heater will blow out cool air.
5. My heater is making a noise when switched on or off.
 - a. This is due to the material expanding when heated and contracting when cooled – do not be alarmed, this is normal and to be expected.