


air pro

16" PEDESTAL FAN

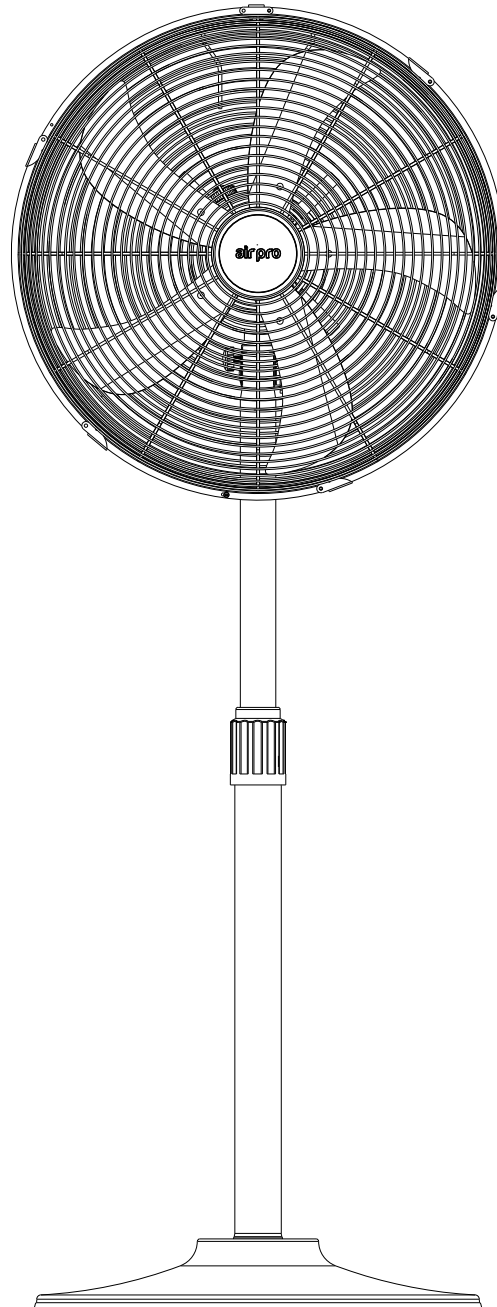

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG
MODE D'EMPLOI
MANUALE DI ISTRUZIONI
MANUAL DE INSTRUCCIONES
HANDLEIDING


AIRPROHOME.COM

Please keep this manual safe for future reference!

Thank you for selecting this Air Pro Pedestal Fan. Be sure to read this manual carefully before using your new product. Protect yourself and those around you by observing all safety information. Failure to comply with these instructions could result in personal injury and/or property damage.

If assistance is required, please contact our support team by emailing
Support@airprohome.com

You can also contact us by scanning the QR code below

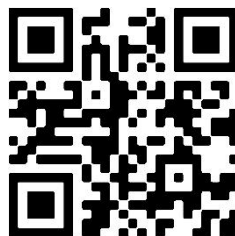

Model No: FD-40M-A
SKU: AP0214/AP0215/AP0216/AP0217/AP0218
220-240V A.C 50-60Hz 50W

Note: The specifications and/or components of this appliance are subject to change without prior notice

1 Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Carefully read this instruction manual before using appliance. 
- Ensure that the fan is switched off from the supply mains before removing the guard.
- Keep appliance out of reach of young children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- Do not disassemble the appliance. There are no user serviceable parts inside.
- **VERY IMPORTANT:**
Ensure that appliance does not get wet (water splashes etc.).
Do not use appliance with wet hands.
Do not immerse appliance in water or other liquids or use near sinks, baths or showers.
- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that they will not be walked on or pinched by items placed on or against them, or by the appliance itself.
- Use appliance only for its intended use. Appliance is intended for household use only and not for commercial or industrial use.
- Do not use appliance if it has been dropped or if any part of appliance (including cord or plug) has been damaged. Take appliance to your nearest authorised service centre or qualified dealer for inspection or repair.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Use only accessories recommended or supplied by an authorised service centre or qualified dealer. The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- Do not install the unit on other appliances, on uneven surfaces or where it could be subject to: heat sources (e.g. radiators or stoves), direct sunlight, excessive dust or mechanical vibrations.

- Appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not operate appliance underneath or near flammable or combustible materials (e.g. curtains). Keep at least 300mm clearance around sides, back, front and top.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not block any ventilation openings.
- Turn off and unplug before cleaning or storing.
- Any type of servicing, apart from ordinary cleaning, must be carried out by an authorised service centre or qualified dealer. There are no user serviceable parts in this appliance.
- If this appliance is used by a third party, please supply the instruction manual with it.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or injury to the user.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of appliance.

Additional Safety Instructions

If using an extension cord:

- The cord should be checked and tested by an authorised service centre or a qualified dealer.
- The technical specifications of the extension cord must match or exceed the technical specifications of this appliance.
- Do not allow the cord to hang over the edge of the work surface or to come into contact with stoves or other hot surfaces.
- If the cord or plugs are worn or damaged, do not use.
- Unplug from the power socket by grasping the plug body - Do not pull on the cord.

2 Components

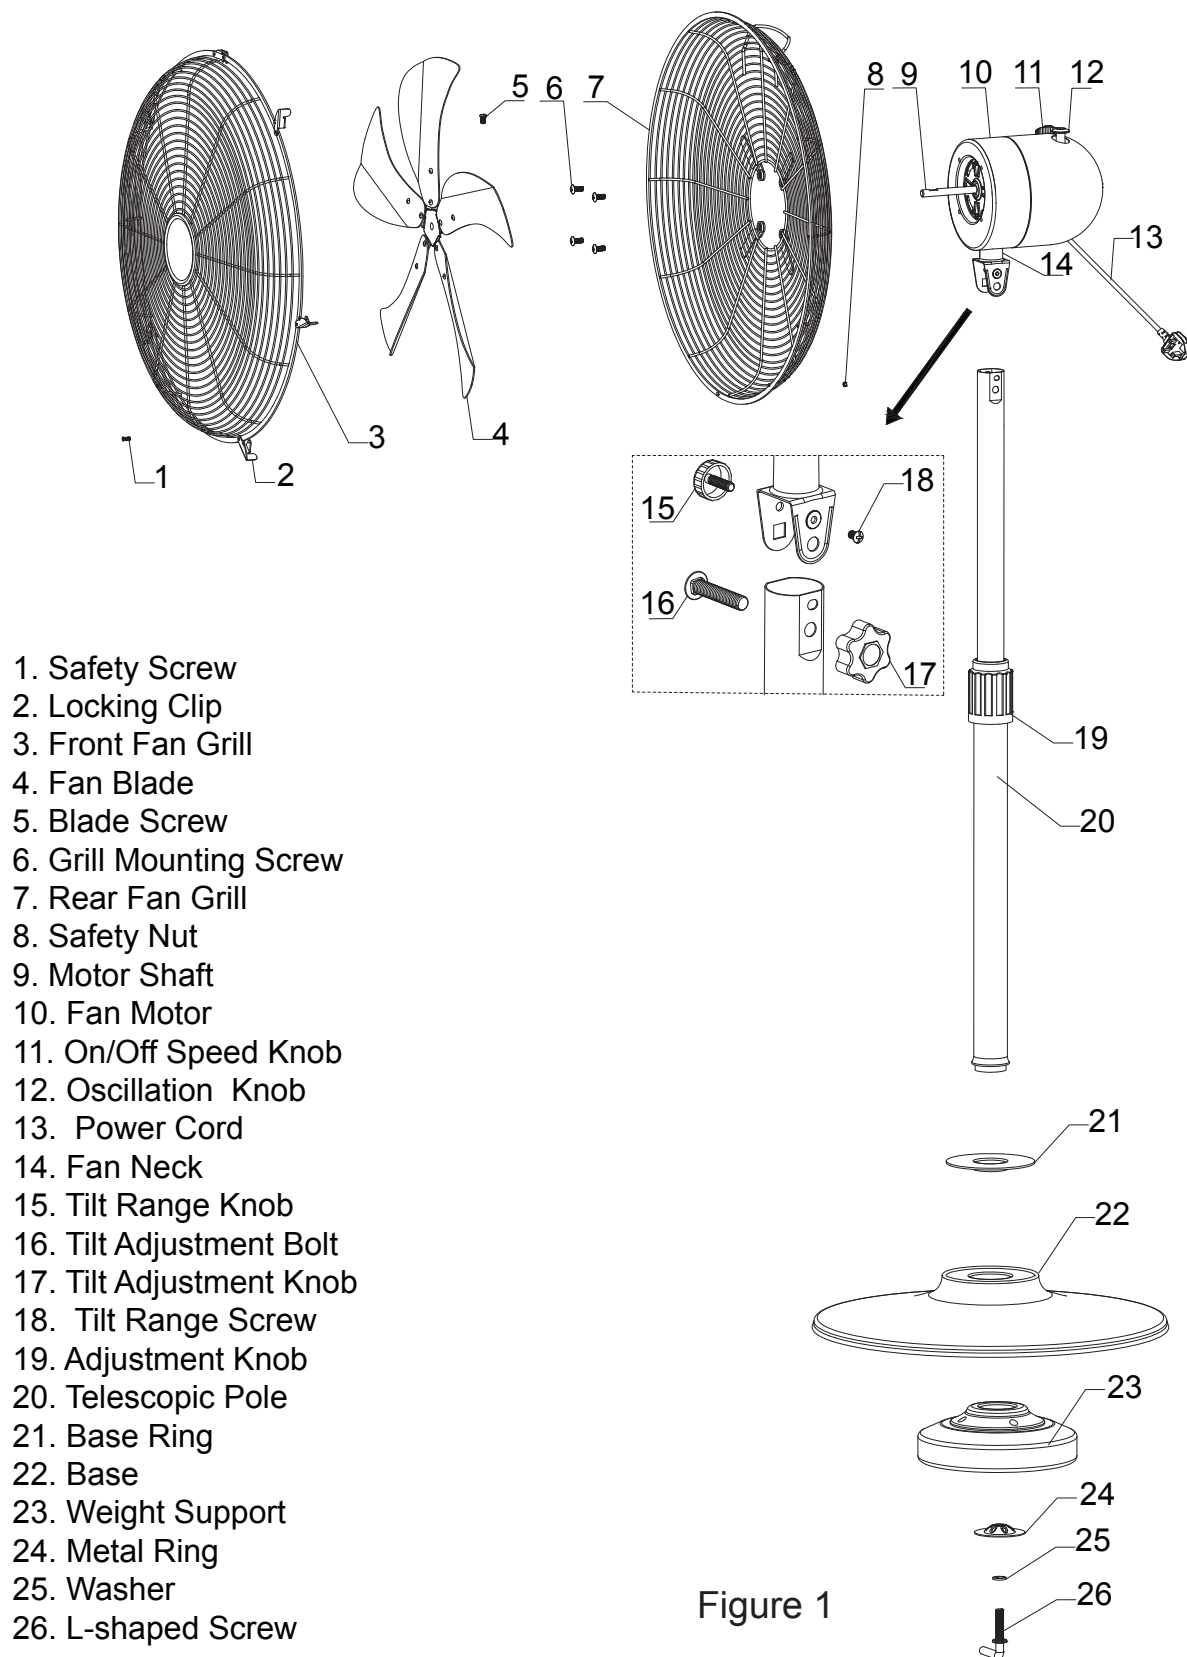


Figure 1

3 Assembly

1. Remove the L-shaped screw with the metal ring from the telescopic pole by turning it counter clockwise.

Figure 2

2. Place the base ring on top of the base, with the flat side of the base ring facing upward. Place the weight support under the base.

3. Insert the telescopic pole into the top of the base ring and base. Install the L-shaped screw with the metal ring through the weight support to the threaded hole in the bottom of the telescopic pole to secure the pole to the base. Figure 3

4. Tip the base back upright.

5. Grasp the telescopic pole firmly and twist the adjustment knob counter clockwise to loosen. Figure 4.

6. Raise the inner pole to maximum height and tighten the adjustment knob by twisting clockwise until secure. Figure 4.

7. Attach motor to the inner pole, Follow the position of the hole slot. Figure 5

8. Fix the joint screw through the inner pole and tighten it. Then fasten with vertical position knob and position screw. Figure 6.

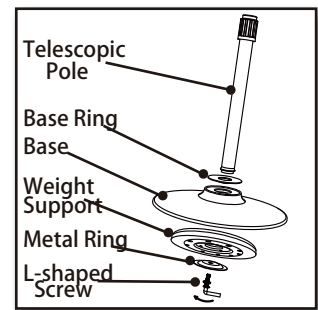


Figure 2

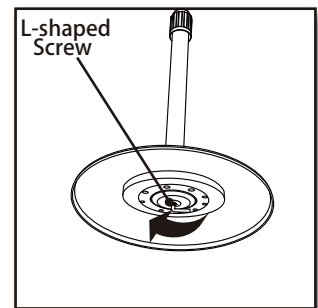


Figure 3

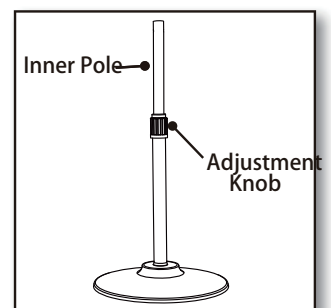


Figure 4

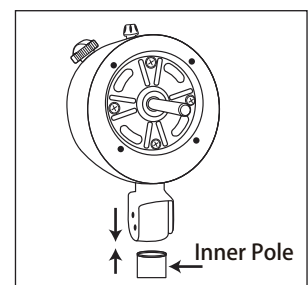


Figure 5

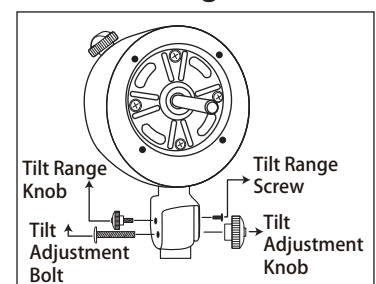


Figure 6

9. Remove the four rear grill mounting screws from the motor housing. Figure 7.

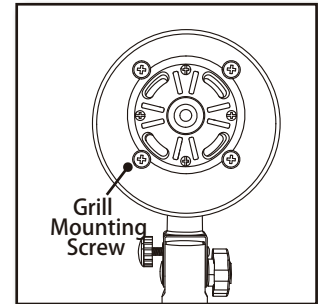


Figure 7

10. Make sure the rear grill is positioned so that three of the grill lines are completely between the top tabs, Figure 8. Then place the rear grill against the motor housing, and line up the four tabs on the back of the grill to the four screw holes on the front of the motor.

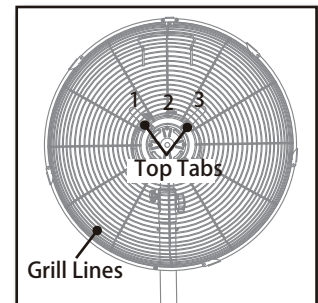


Figure 8

11. To attach the rear grill to the motor housing partially install the four grill mounting screws. Tighten all four screws. Figure 9.

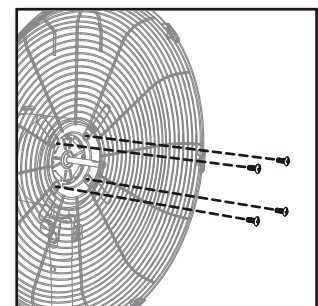


Figure 9

Note: One of the grill mounting screws will have a star washer on it, for grounding purposes. The other 3 screws will not have a washer.

12. Loosen the screw on the back of the blade assembly. Figure 10a. Slide the blade assembly onto the motor shaft. Figure 10.

13. Tighten the screw on the blade assembly to secure it to the motor shaft. Make sure that the end of the screw is positioned within the notch on the shaft. Figure 11.

Caution: Be sure to tighten the screw on the back of the fan blade to the flat part of the motor shaft.

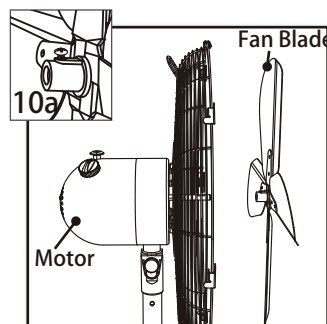


Figure 10

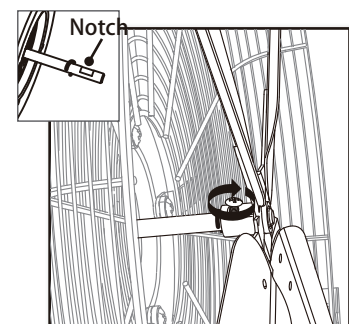


Figure 11

14.Center the front grill by aligning the logo on the grill hub so it is horizontal and parallel to the floor. Figure 12.

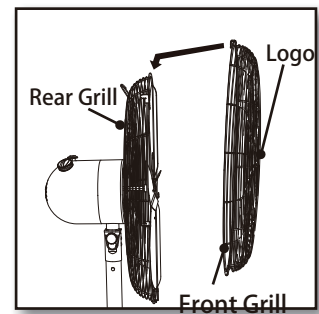


Figure 12

15.Mount the front grill to the rear grill, tighten the grills using the grill locking screw and nut at the bottom of the grill. Figure 13.

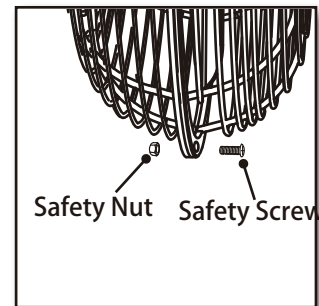


Figure 13

16.Secure the grills completely together by snapping the 5 grill clips into place. Figure 14.

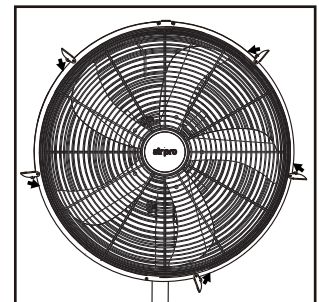


Figure 14

4 Instructions For Use

Remove the cable tie and unravel the cordset before operation.

4.1 Head Tilt

The fan and motor assembly Can be tilted up and down to your desired angle

To adjust the tilt angle, undo the adjustment knob, tilt the head to the desired angle and then re-tighten the knob. Refer to the section “Attach Head to Stand” for adjustment instructions.

4.2 Fan On / Off / Speed

Rotate the knob to position I for a low speed , II for a medium speed and III for a high speed.


Rotate the knob to position 0 to switch the Fan off.



4.3 Oscillation


Press the clutch knob down to activate the oscillating function. The fan head will swing from side to side whilst blowing air.

To stop oscillation, allow the Fan head to move into the desired position and then pull the clutch knob up.

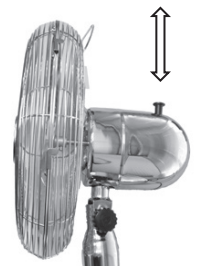

4.4 Height Adjustment

The height of the fan can be adjusted. Unscrew the adjustment knob on the side of the stand post, slide the inner post up or down and then tighten the knob again to lock in place.

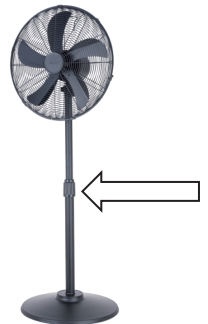

5 Care and Cleaning

- Ensure that the fan is switched off from the supply mains before removing the guard.
- Turn off and unplug the unit prior to cleaning.
- Clean the motor housing and body assembly with a clean, damp cloth and wipe dry.
- Never spray with liquids or submerge the Fan in water or any other liquid.
- Do not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

6 Storage

Switch off and unplug the fan.

Coil the cable loosely. Do not kink or pull the cable tight. Store your fan in a cool, dry location


INFORMATION SHEET FOR FANS

AP0214/AP0215/AP0216/AP0217/AP0218 (FD-40M-A)

Description	Symbol	Value	Unit
Maximum fan flow rate	F	68.80	m ³ /min
Fan power input	P	48.20	W
Service value	SV	1.43	(m ³ /min)/W
Standby power consumption	P _{SB}	-	W
Seasonal electricity consumption	Q	15.42	kWh/a
Fan sound power level	L _{WA}	65.89	dB(A)
Maximum air velocity	c	3.04	m/sec
Measurement standard for service value	IEC 60879: 2019		

If further assistance is required, please contact our support team by emailing
Support@airprohome.com

You can also contact us by scanning the QR code below

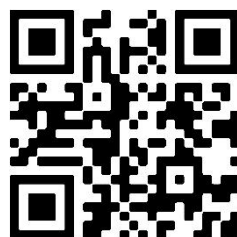

IMPORTER: MRIA LTD. 1 PINDAR ROAD, HODDESDON, EN11 0BZ, UK

EC REP: VISHTEC LTD. 3RD FLOOR OFFICE 5, PLOVDIV 2,
LIUBEN KARAVELOV, 4002, BG