


air pro

16" WALL FAN

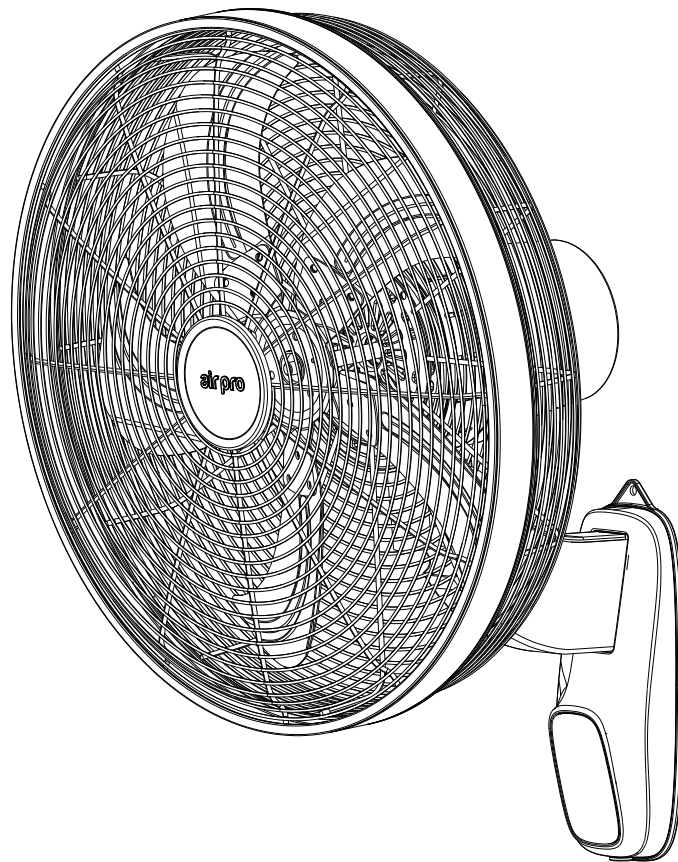

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG
MODE D'EMPLOI
MANUALE DI ISTRUZIONI
MANUAL DE INSTRUCCIONES
HANDLEIDING


AIRPROHOME.COM

Please keep this manual safe for future reference!

Thank you for selecting this Air Pro Wall Fan. Be sure to read this manual carefully before using your new product. Protect yourself and those around you by observing all safety information. Failure to comply with these instructions could result in personal injury and/or property damage.

If assistance is required, please contact our support team by emailing
Support@airprohome.com

You can also contact us by scanning the QR code below

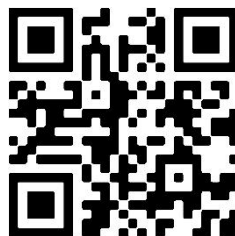

Model No: FW-40MF-2
SKU: AP0219
220-240V A.C 50-60Hz 70W

Note: The specifications and/or components of this appliance are subject to change without prior notice

1 Safety Instructions

1. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. **WARNING:** In order to prevent strangulation and shock hazard to children, the flexible wiring connected to this fan shall be effectively fixed to the wall.
4. Do not operate any product with a damaged cord or plug, after the product malfunctions, is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
5. Avoid contact with moving parts. Do not insert any object through the grill when the fan is operating.
6. Do not cover the grill, or operate in close proximity to curtains, etc.
7. The structure to which the fan is to be mounted must be capable of supporting a weight of **20kg**.
8. This fan is suitable for indoor use only.
9. Ensure that the fan is switched off from the supply mains before removing the guard.

2 Components

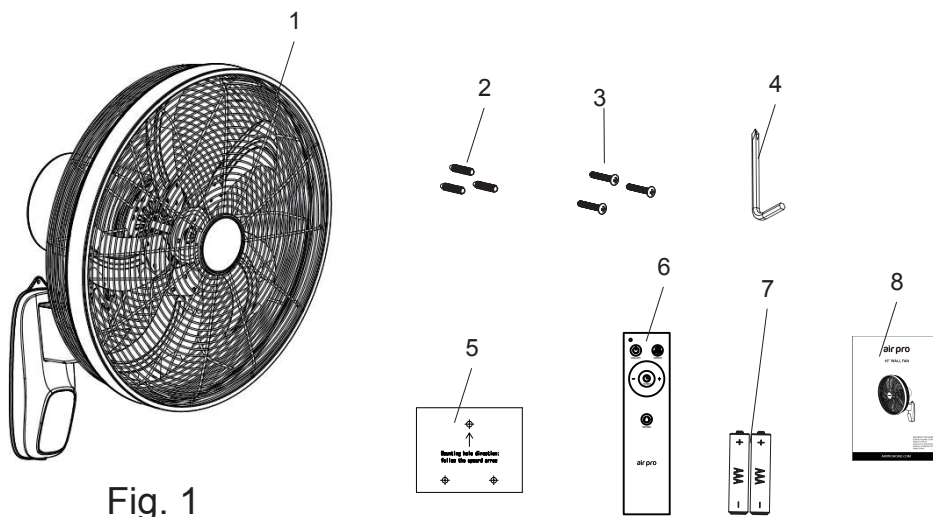


Fig. 1

- | | |
|--------------------------------|-----------------------------------|
| 1. Fan assembly x 1 set | 5. Drilling positioning plate x 1 |
| 2. Plastic anchor x 3 | 6. Remote controller x 1 set |
| 3. Mounting bracket screws x 3 | 7. AAA Batteries x 2 pcs |
| 4. L screwdriver x 1 | 8. Instruction Manual x 1 |

3 Assembly

3.1 Use the supplied drilling positioning plate as a template to mark the screw hole positions on the wall and drill the screw holes(Fig. 2).


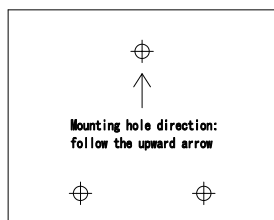


Fig. 2

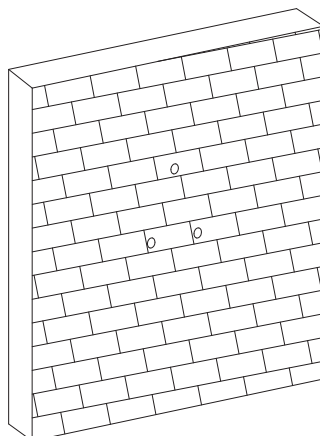

3.2 Install three anchors into the screw holes on the wall. (Fig.3)

3.3 Install two mounting screws into the screw holes on the wall, leaving some threads outside, so as to hang the fan assembly. (Fig.4)

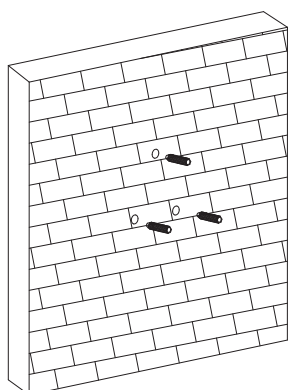


Fig. 3

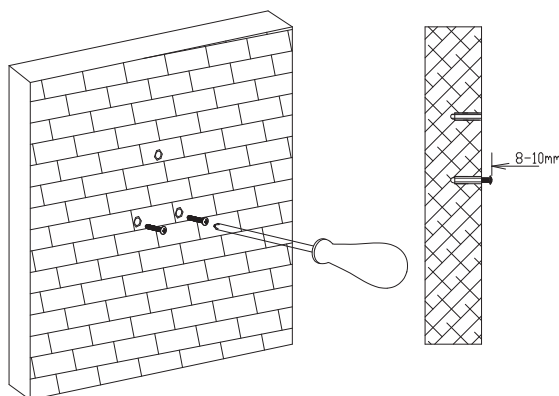


Fig. 4

3.4 Hang the fan assembly onto the two mounting bracket screws. (Fig.5)

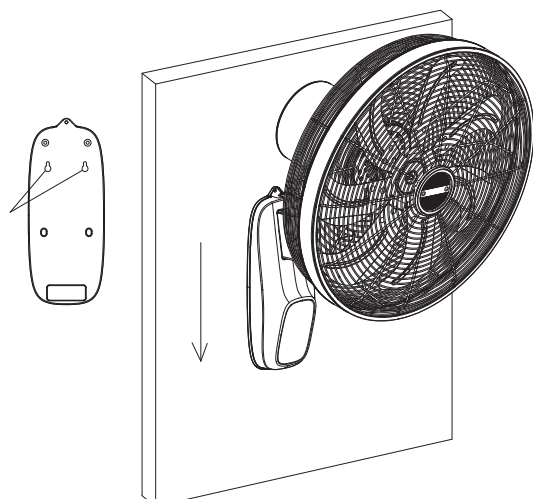


Fig. 5

3.5 Intall the third mounting bracket screw into the top screw hole, secure the fan assmbly by tightening the third mounting brakcet screw with the L screwdriver. (Fig.6)

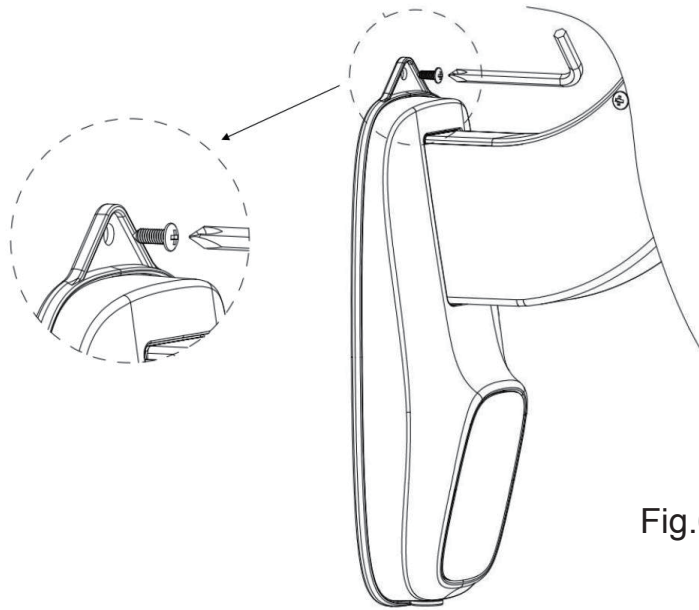


Fig.6

3.5 Adjust the arm to your desired angle. (Fig.7)

NOTE: Do not rotate/twist the arm more than $17.5^{\circ} + 17.5^{\circ}$ (35°), as this may damage the joint.

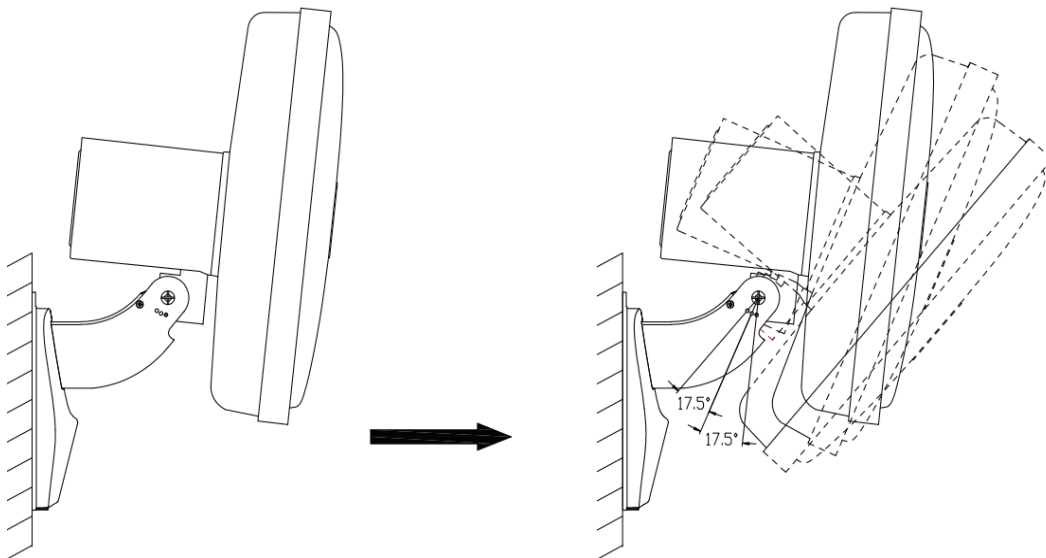


Fig.7

4 Instructions for Use

Remove the cable tie and unravel the cordset before operation.

4.1 BATTERY INSTALLATION

2 x AAA 1.5V batteries are required to operate the remote control. Pull out the battery cover and install the batteries. Ensure the polarity is correct as shown in the battery compartment.

4.2 OPERATING THE CONTROL PANEL




: Standby LED indicator

The Standby LED indicator on the fan body base lights up to indicate that the power is on.



: Fan Timer LED indicator

The Fan Timer LED indicator on the fan body base light up to indicate fan timer button has been touched and fan timer function has been activated.

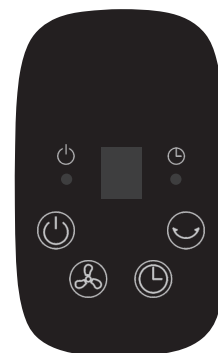

: Speed / Timing LED display



: Fan On/Off Button

Touch the button to turn the fan on/ off. When turned on, the fan runs on speed 1.



: Fan Swing Function On/Off Button

Touch the button to activate the fan oscillation function when the fan is running.



: Speed Button

Touch the button to select and switch the speeds from speed 1 to speed 3.



: Fan Timer Button

Touch the button to activate the fan timer function, the minimum timed period is 1 hour and the maximum is 9 hours.

Touch the button to activate the fan timer function, the minimum timed period is 1 hour and the maximum is 9 hours. each time the button is touched, the time increased by one hour in a cyclic manner:1-2-3-4-5-6-7-8-9-off-1-2-3-4-5-....., the Speed/Timing LED display on the fan body base shows numbers 1-2-3-4-5-6-7-8-9 representing the corresponding hours from 1 hour to 9 hours. After the setting is completed, over 5 seconds, the fan enters the countdown to turn off.

Note: Press and hold the fan timer button for 5 seconds to cancel the timing setting during the timing setup process or after the timing has been set.

Note: when the fan is working, touch the fan on/off button to turn off all working settings, the Standby LED indicator on the fan body base will light up, and the fan will enter standby mode.

4.3 OPERATING THE REMOTE



ON/OFF

Fan ON/OFF Button:

Press the button to turn the fan ON/OFF.



SPEED

Fan Speed Button: Press the button change the fan speed at following order: Low speed, Medium speed, High speed.



TIMER

Fan Timer Button: Press the button to activate the fan timer function, the fan will turn off after running 1 ,2,3 ... 9 hours.



SWING

Fan Swing Button: Press the button to activate the fan oscillation function when fan is running.



5 SAFETY PRECAUTIONS FOR BATTERY


1. WARNING – Keep new and used batteries away from children.
2. CAUTION – Do not ingest battery—Chemical burn hazard.
3. Always use 2 x AAA battery type with this wall fan remote controller.
4. Ensure the batteries are inserted with the correct polarity.
5. To prevent false operation during battery insertion or replacement, this wall fan must be disconnected from the supply mains.
6. non-rechargeable batteries are not to be recharged;
7. different types of batteries or new and used batteries are not to be mixed;
8. Remove batteries from the product when not in use for long periods of time.
9. Batteries must be removed from the remote transmitter before it is discarded.
10. Dispose of exhausted batteries immediately and safely (so they cannot be retrieved by children).Batteries can still be dangerous. Contact your local council to safely dispose of the battery.
11. Regularly check the product and make sure the battery box lid is correctly secured. If the battery compartment does not close securely, stop using the product and keep it away from children.
12. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
13. Battery Leaks: Battery contains chemicals and should be treated as any chemical would. Take precautions when handling leaked battery chemicals. Battery chemicals should not be placed near the eyes or ingested.

6 Care and Cleaning

- Ensure that the fan is switched off from the supply mains before removing the guard.
- Turn off and unplug the unit prior to cleaning.
- Clean the motor housing and body assembly with a clean, damp cloth and wipe dry.
- Never spray with liquids or submerge the Fan in water or any other liquid.
- Do not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

If further assistance is required, please contact our support team by emailing
Support@airprohome.com

You can also contact us by scanning the QR code below

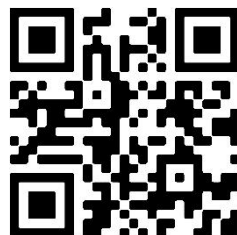

IMPORTER: MRIA LTD. 1 PINDAR ROAD, HODDESDON, EN11 0BZ, UK

EC REP: VISHTEC LTD. 3RD FLOOR OFFICE 5, PLOVDIV 2,
LIUBEN KARAVELOV, 4002, BG