 


air pro

8" RETRO PEDESTAL FAN

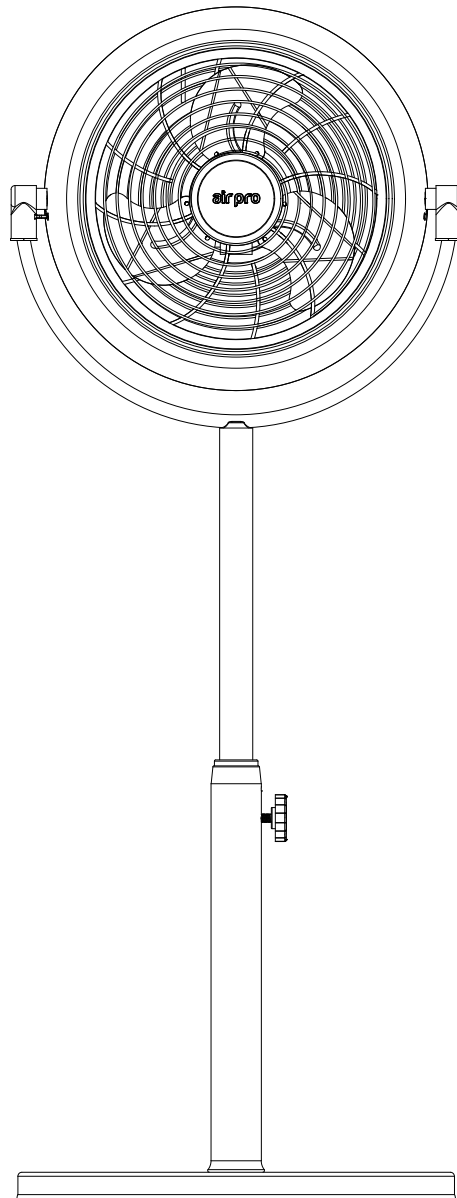


INSTRUCTION MANUAL
BEDIENUNGSANELEITUNG
MODE D'EMPLOI
MANUALE DI ISTRUZIONI
MANUAL DE INSTRUCCIONES
HANDLEIDING

Please keep this manual safe for future reference!

Thank you for selecting this Air Pro Retro Pedestal Fan. Be sure to read this manual carefully before using your new product. Protect yourself and those around you by observing all safety information. Failure to comply with these instructions could result in personal injury and/or property damage.

If assistance is required, please contact our support team by emailing
Support@airprohome.com

You can also contact us by scanning the QR code below

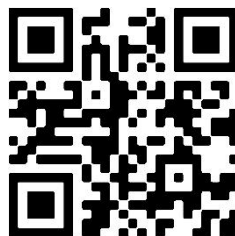

Model No: FZ-20M07N
SKU: AP0222/AP0223/AP0224
220-240V A.C 50Hz 20W

Note: The specifications and/or components of this appliance are subject to change without prior notice

1 Safety Instructions

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Carefully read this instruction manual before using appliance. 
- Ensure that the fan is switched off from the supply mains before removing the guard.
- Keep appliance out of reach of young children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- Do not disassemble the appliance. There are no user serviceable parts inside.
- **VERY IMPORTANT:**
Ensure that appliance does not get wet (water splashes etc.).
Do not use appliance with wet hands.
Do not immerse appliance in water or other liquids or use near sinks, baths or showers.
- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that they will not be walked on or pinched by items placed on or against them, or by the appliance itself.
- Use appliance only for its intended use. Appliance is intended for household use only and not for commercial or industrial use.
- Do not use appliance if it has been dropped or if any part of appliance (including cord or plug) has been damaged. Take appliance to your nearest authorised service centre or qualified dealer for inspection or repair.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Use only accessories recommended or supplied by an authorised service centre or qualified dealer. The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- Do not install the unit on other appliances, on uneven surfaces or where it could be subject to: heat sources (e.g. radiators or stoves), direct sunlight, excessive dust or mechanical vibrations.

 
 
- Appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not operate appliance underneath or near flammable or combustible materials (e.g. curtains). Keep at least 300mm clearance around sides, back, front and top.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Do not block any ventilation openings.
- Turn off and unplug before cleaning or storing.
- Any type of servicing, apart from ordinary cleaning, must be carried out by an authorised service centre or qualified dealer. There are no user serviceable parts in this appliance.
- If this appliance is used by a third party, please supply the instruction manual with it.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or injury to the user.
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of appliance.

Additional Safety Instructions

If using an extension cord:

- The cord should be checked and tested by an authorised service centre or a qualified dealer.
- The technical specifications of the extension cord must match or exceed the technical specifications of this appliance.
- Do not allow the cord to hang over the edge of the work surface or to come into contact with stoves or other hot surfaces.
- If the cord or plugs are worn or damaged, do not use.
- Unplug from the power socket by grasping the plug body - Do not pull on the cord.


2 Components

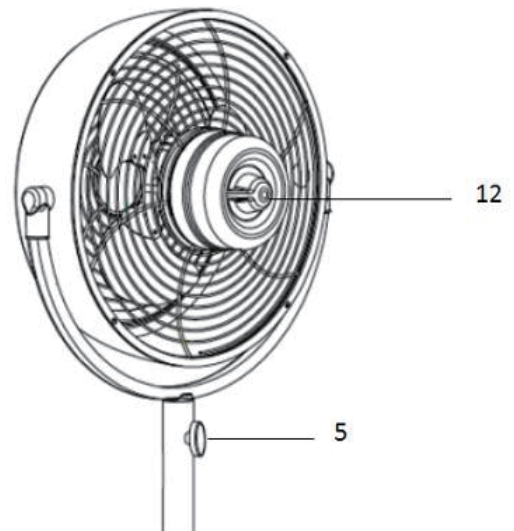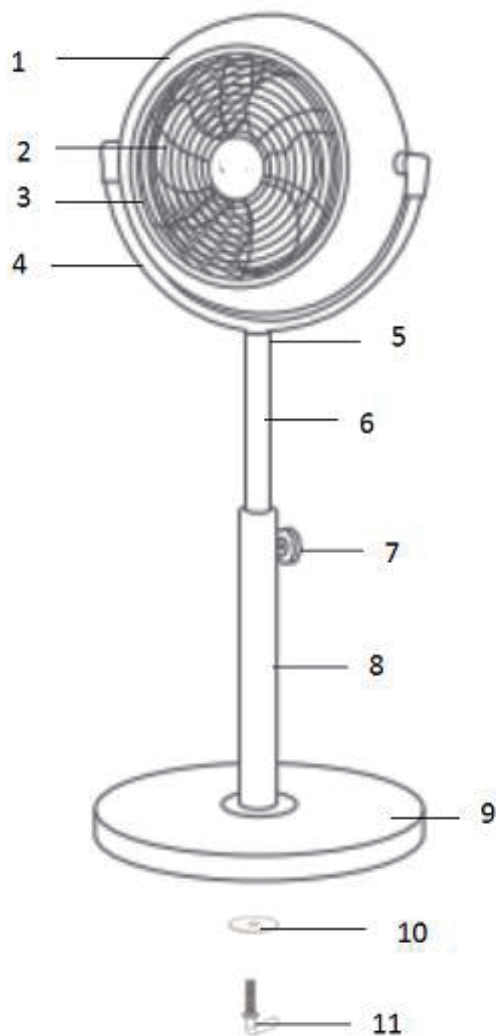


- | | | | |
|----|--------------------|-----|------------------------|
| 1. | Fan housing | 7. | Height adjustable knob |
| 2. | Fan blade | 8. | Standing pipe (down) |
| 3. | Front fan grill | 9. | Round base |
| 4. | "U" holder | 10. | Base washer |
| 5. | Neck lock knob | 11. | Base lock screw |
| 6. | Standing pipe (up) | 12. | Switch |

3 Assembly

 1. Remove the “Base washer” and “Base lock screw” from the bottom of the standing pipe (down), Put the base to contact with bottom of the standing pipe (down), lock the washer and screw as Following:

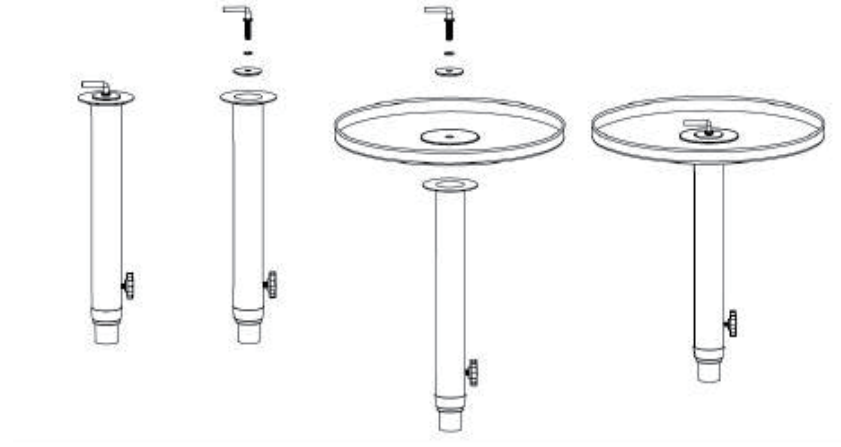

 
- 2: Remove the “Neck lock knob” from the main body, and then Install the fan main body on the top of the standing pipe (up) as following:

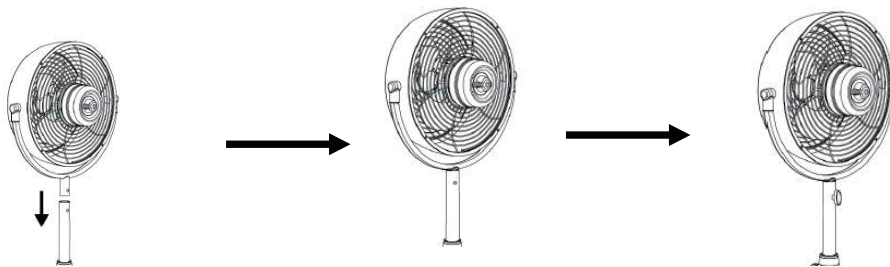

4 Instructions for Use

The fan has 3 speed settings:

 - 0- Fan is off
- 1- Lowest speed
- 2- Medium speed
- 3- Top speed

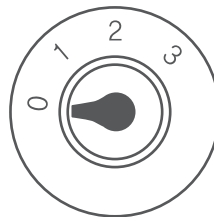

Tilt adjustable, press the fan main body to select your target angle for using

The height can be adjusted.

Loosen the screw to move the stand up or down as required.

Tighten the screw at the desired position.

5 Care and Cleaning

- Ensure that the fan is switched off from the supply mains before removing the guard.
- Turn off and unplug the unit prior to cleaning.
- Clean the motor housing and body assembly with a clean, damp cloth and wipe dry.
- Never spray with liquids or submerge the Fan in water or any other liquid.
- Do not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.

6 Storage

Switch off and unplug the fan.

Coil the cable loosely. Do not kink or pull the cable tight. Store your fan in a cool, dry location


INFORMATION SHEET FOR FANS

AP0222/AP0223/AP0224 (FZ-20M07N)

Description	Symbol	Value	Unit
Maximum fan flow rate	F	14.92	m ³ /min
Fan power input	P	17.4	W
Service value	SV	0.86	(m ³ /min)/W
Standby power consumption	P _{SB}	-	W
Seasonal electricity consumption	Q	5.57	kWh/a
Fan sound power level	L _{WA}	53.95	dB(A)
Maximum air velocity	c	1.77	m/sec
Measurement standard for service value	IEC 60879: 2019		

If further assistance is required, please contact our support team by emailing
Support@airprohome.com

 You can also contact us by scanning the QR code below

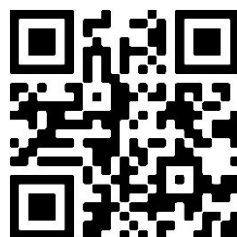

IMPORTER: MRIA LTD. 1 PINDAR ROAD, HODDESDON, EN11 0BZ, UK

EC REP: VISHTEC LTD. 3RD FLOOR OFFICE 5, PLOVDIV 2,
LIUBEN KARAVELOV, 4002, BG