 


## AIR PRO 40" TOWER FAN

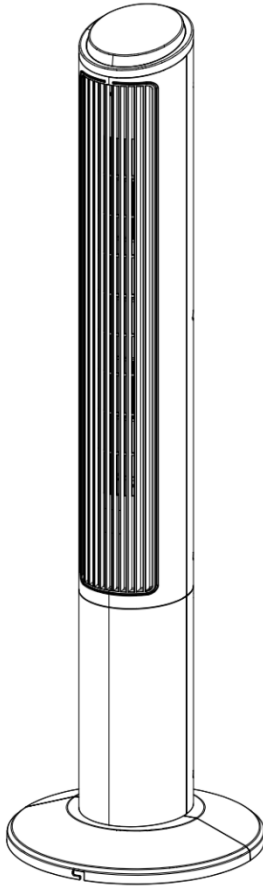


**AP0228 | AP0229 | AP0230**

**PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE  
USE & RETAIN THIS MANUAL FOR FUTURE REFERENCE.**

This product comes with a standard 1 year manufacturer  
warranty.

This can be extended up to 2 years by scanning below.

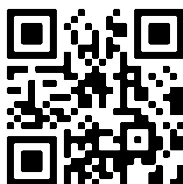

## **TECHNICAL DATA**

Rated Power – 50W

Rated Voltage – 220-240V

Rated Frequency – 50-60Hz

Model – TF-K4007RY

## SAFETY WARNINGS:

Please ensure this product is installed correctly according to the instructions, and the following instructions are strictly adhered to. Failure to do so may result in electric shock, fire, personal injury, or other damage.

1. This product is for household use **ONLY**.
2. Do **NOT** operate this product if the front grille is not installed or if the fan blades are loose or detached.
3. Do **NOT** insert fingers or foreign objects into the grille or moving fan blades.
4. Do **NOT** allow children or anyone who has not read this manual to operate this product.
5. Keep hair, clothing, and other loose items away from the fan to prevent them from getting caught.
6. Cleaning and user maintenance should not be undertaken by children.
7. Do **NOT** manually swing the fan head, as this may damage the internal transmission mechanism.
8. Do **NOT** lean on the fan or tilt it while it is operating.

9. Ensure that the mains cable is fully extended before use, and arrange it so that it is not in contact with any part of the appliance
10. This product is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or by those lacking experience or knowledge, unless they are supervised or instructed by someone responsible for their safety.
11. If the product supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
12. Do not use this fan in the immediate surroundings of a bath, shower or swimming pool.
13. Do **NOT** pull on the power cord. Never move, carry or hang the appliance by the power cord.
14. Do **NOT** use this appliance in high humidity or steam-filled rooms
15. Avoid placing the power cord in areas where it can become a trip hazard.
16. Do **NOT** place the power cord under carpeting, or cover it with rugs, runners or similar items.

 
17. Do **NOT** use this fan if there are visible signs of damage to the fan or it's parts
18. **WARNING:** To reduce the risk of fire, keep textiles, curtains or any other flammable material a minimum distance of 1m away from the air outlet.
19. Do **NOT** attempt to repair, disassemble or modify the appliance.
20. Disconnect from mains when not in use or when moving or cleaning.
21. Do **NOT** use this appliance with an external programmer, timer switch or any other device which would switch the appliance on automatically, unless this is pre-built into the appliance from the manufacturer.
22. Do **NOT** operate this appliance with wet hands.
23. Do **NOT** allow water, or other liquids to run into the interior of the appliance, as this could create a fire and/or electrical hazard.
24. Using the main unit button or the remote control to shut down does not completely switch off the product. Unplug the power cord if not in use for an extended period.

## ASSEMBLY INSTRUCTIONS


The base of the fan is formed by two semi-circle halves which interlock together. Before connecting the two pieces, unscrew the lock nut from the base of the tower fan, removing it from the fan body.


To connect, bring the two pieces together, with one either side of the power cable - and tilt each piece. One piece should be tilted upwards on one side, and the second piece should be tilted upwards on the other.

Push the first piece downward, and pull the second piece upwards to interlock the two pieces together and press firmly so the tabs lock together.

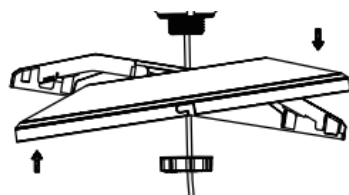


  Align and insert the bottom of the tower fan into the base piece, and once aligned, screw the locking nut to secure.

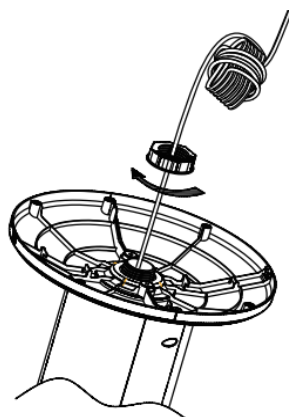

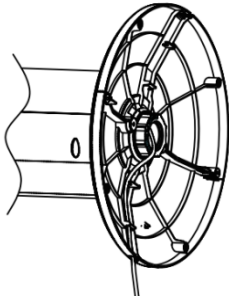


 You can then gently press the wire into the clamps on the underside to secure, and thread through the bottom of the base for access.

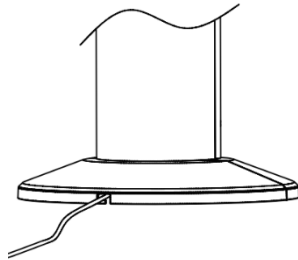

## DISPLAY & USAGE:
 
### Tower Display:

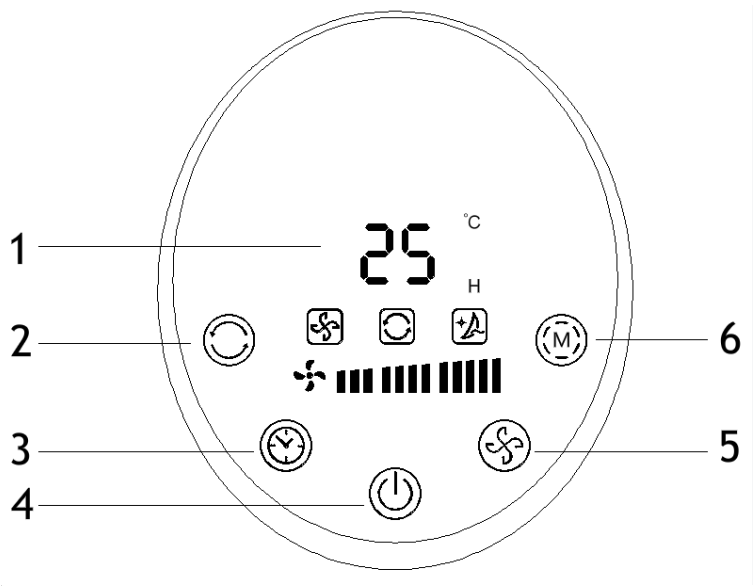

1. LED Screen
2. Oscillation Control
3. Timer
4. Power ON / OFF
5. Wind Speed
6. Mode

## **ON/OFF**

When the tower fan is powered on, press the Power ON / OFF button to start the fan. Each time the fan is turned on, the wind speed will default to Low Speed

When the fan is operating, press this button again to turn it off.

## **LED Display**

The LED screen will display the room temperature, along with the wind speed, mode (Regular or Sleep). Pressing the Timer button will also display the remaining timer duration.

## **Timer**

This machine comes with a built in automatic OFF timer, which you can set from 1–15 hours.

Press the TIMER button to set the desired operating time (1–15 hours). Each press of the timer button will increase the timer by 1 hour.

**NOTE:** After the timer is set, the LED screen will turn off after 8 seconds. The screen will turn on again when any button is pressed.

Once the timer is set, the fan will automatically turn off once the set time has elapsed.

## **Wind Speed & Mode**

This machine has three wind speed levels available to select from:

**Low**  , **Medium**  & **High** 

Pressing the MODE button will adjust the wind mode.

There are Two modes are available:

Regular



Sleep



 
When in Sleep mode, the fan speed will decrease from the current setting and then continue operating at the lowest speed setting. The LED display will turn off after 8 seconds. You can then adjust the speed at any time by pressing the SPEED button.

## **OSCILLATION**

Press the  button to start and stop the oscillation function. The oscillation symbol will appear on the LED screen when enabled.


## REMOTE CONTROL

This appliance can also be operated from distance by using the included remote control. The functionality of the remote control buttons are the same as that of pressing the controls on the control panel directly. However “Silent Mode” can only be activated via Remote or Voice Control Only.

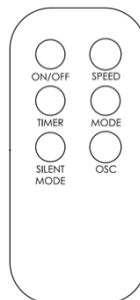

| <b>⚠ WARNING</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                   |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| <ul style="list-style-type: none"><li>• <b>INGESTION HAZARD:</b> This product contains a button cell or coin battery.</li><li>• <b>DEATH</b> or serious injury can occur if ingested.</li><li>• A swallowed button cell or coin battery can cause <b>Internal Chemical Burns</b> in as little as <b>2 hours</b>.</li><li>• <b>KEEP</b> new and used batteries <b>OUT OF REACH of CHILDREN</b></li></ul> <p><b>Seek immediate medical attention</b> if a battery is suspected to be swallowed or inserted inside any part of the body.</p> |  |

### Battery Replacement

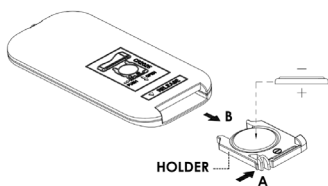 

Remove the battery holder by pressing the locking tab A with your thumb and pulling it out as per arrow B

Replace the battery with the same type (CR2025 Type Lithium Battery), making sure the (+) side facing up.

Gently push in the holder until securely locked into place.

## VOICE CONTROL

This Air Pro Tower Fan has built in voice control which can be utilised without WiFi or Bluetooth connectivity. Simply say “**Hi Fan**” followed by one of the below commands for the desired action:

| Desired Action                 | Voice Command                                |
|--------------------------------|----------------------------------------------|
| Activate Fan                   | “Fan on” / “Turn on the fan”                 |
| De-activate Fan                | “Fan off” / “Turn off the fan”               |
| Set Low Speed                  | “Low Speed” / “Fan Low” / “Low Fan”          |
| Set Medium Speed               | “Medium Speed” / “Fan Medium” / “Medium Fan” |
| Set High Speed                 | “High Speed”, “Max Speed” / “Fan High”       |
| Increase Fan Speed             | “Fan Speed Up”                               |
| Decrease Fan Speed             | “Fan Speed Down                              |
| Start Oscillation              | “Rotate On” / “Rotation On”                  |
| Stop Oscillation               | “Rotate Off” / “Rotation Off”                |
| Set Off timer                  | “Stop in X* Hours”                           |
| Cancel Timer                   | “Cancel Timer” / “No Timer”                  |
| Activate Sleep Mode            | “Sleep Mode”                                 |
| Activate Normal Mode           | “Normal Mode”                                |
| Silent Mode                    | “Be Quiet”                                   |
| Turn Off Voice Control         | “Voice Control Off”                          |
| Turn On Voice Control          | “Voice Control On”                           |
| Mute Fan Voice Response        | “Voice Response Off”                         |
| Turn on Fan Voice Response     | “Voice Response On”                          |
| Increase Voice Response Volume | “Volume Up”                                  |
| Decrease Voice Response Volume | “Volume Down”                                |
| Voice Response to Maximum      | “Volume all the way up”                      |
| Voice Response to Minimum      | “Volume all the way down”                    |

For Example, if you wanted to deactivate the Fans Voice Feedback, you would say “Hi Fan, Voice Response Off”

**NOTE:** When saying “Hi Fan”, the device will beep to confirm activation of the voice control function. You will have 7 seconds to use a command; Once an initial command is given, you then have an additional 7 seconds to action another command without repeating “Hi Fan”

After 7 seconds without a command, the voice control function will switch off, at which point you will need to repeat “Hi Fan” in order to give further commands.

If the fan does not recognise a command, it will **not** respond and will continue to operate at its current setting.

**\*NOTE:** For Timer, Replace “X” with the number of hours (1-15) you would like to set the timer for.

E.g. “Hi Fan, Stop in 8 hours”

## MAINTENANCE & DISPOSAL

**CAUTION:** Before Cleaning, switch off the fan and disconnect it from the power socket, wait for the fans to stop turning completely before cleaning.

Vacuum-clean the vents to remove dust and debris from these areas.

To remove dust on external surfaces, wipe the fan with a damp (not wet) lint-free cloth, rinsed in a neutral detergent only.

**CAUTION:** Do **NOT** use any harsh detergent or abrasive cleaners.

**WARNING!** Do **NOT** spray with liquids or submerge in any liquid or water.

Where possible, please recycle this appliance at end of life. Check with your local authority for recycling advice and facility locations.



If further assistance is required, or you face difficulty when using this device, please contact our support team by emailing [support@airprohome.com](mailto:support@airprohome.com)

You can also contact us by scanning the QR Code below

