


AIR PRO 2000W PTC HEATER

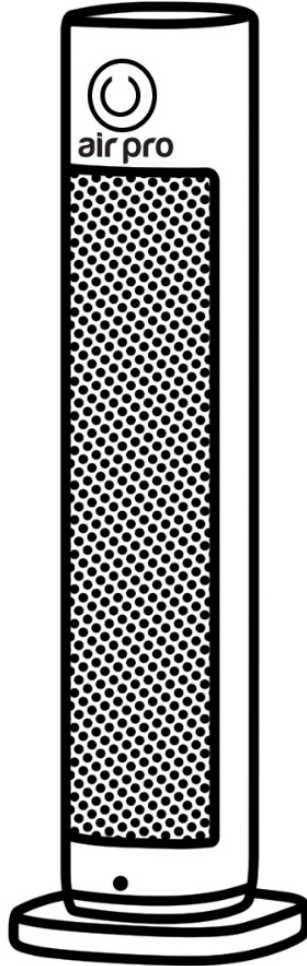


AP0265 | AP0266

**PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE
USE & RETAIN THIS MANUAL FOR FUTURE REFERENCE.**

This product comes with a standard 1 year manufacturer
warranty.

This can be extended up to 2 years by scanning below.

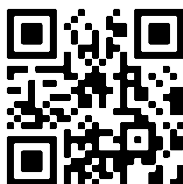

TECHNICAL DATA

Rated Power – 2000W

Rated Voltage – 220-240V

Rated Frequency – 50Hz

Model – NSBE-200FR

Power Level • (Low Heat) – 1000W

Power Level •• (High Heat) – 2000W

Model identifier(s): AP0265 AP0265					
Item	Symbol	Value	Unit	Item	Unit
Heat output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	2,0	kW	manual heat charge control, with integrated thermostat	N/A
Min. heat output (indicative)	P _{min}	1,00	kW	manual heat charge control with room and/or outdoor temperature feedback	N/A
Max. continuous heat output	P _{max,c}	2,0	kW	electronic heat charge control with room and/or outdoor temperature feedback	N/A
Auxiliary electricity consumption				fan assisted heat output	N/A
At nominal heat output	e _{lmax}	0	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	0	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	0	kW	Two or more manual stages, no room temperature control	No
				with mechanic thermostat room temperature control	No
				with electronic room temperature control	Yes
				electronic room temperature control plus day timer	No
				electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	
				room temperature control, with presence detection	No
				room temperature control, with open window detection	No
				with distance control option	No
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	Yes

SAFETY WARNINGS:

This product is only suitable for well insulated spaces and occasional use.



ATTENTION: This appliance has a thermal cut out switch.

If the appliance overheats, the thermal cut out will activate and shut down the appliance.

Should this occur, unplug from the mains and allow to cool for 30 minutes before re-use.



CAUTION: Do **NOT** immerse in water



CAUTION: Hot Surfaces



Do **NOT** cover



Do **NOT** use outdoors


1. This product is for household use **ONLY**.
2. Children should NOT play with this appliance
3. Cleaning and user maintenance should not be undertaken by children.
4. Children under the age of 3 should be kept well away from this appliance at all times, unless under constant supervision.
5. Extreme caution is necessary when any heater is used by or near children of any age and should only be done under strict supervision.
6. Children from ages 3-8 should only switch the appliance on/off only if it has been pre-placed / installed in its intended normal operating position and that they are supervised in doing so. Children within this age range should not plug in the appliance to the mains power, regulate or clean the appliance, or perform user maintenance.
7. This appliance can be used by children aged from 8 years and above, and for persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge if they have been given supervision or instruction concerning the use of this appliance in a safe way, and understand the hazards involved. This is recommended to occur under strict supervision also.

8. Ensure that the mains cable is fully extended before use, and arrange it so that it is not in contact with any part of the appliance
9. **CAUTION** – Some parts of this product can become very hot and cause burns. Particular attention needs to be given where children and vulnerable people are present. To avoid burns, do not let bare skin touch the hot surface.
10. If the product supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
11. In order to avoid overheating, do not cover the heater.
12. The heater must not be located immediately below a socket outlet.
13. Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.
14. Do **NOT** pull on the power cord. Never move, carry or hang the appliance by the power cord.
15. **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
16. Do **NOT** use this appliance to dry or heat clothes

17. Do **NOT** use this appliance in high humidity or steam-filled rooms
18. Avoid placing the power cord in areas where it can become a trip hazard.
19. Do **NOT** place the power cord under carpeting, or cover it with rugs, runners or similar items.
20. Do **NOT** use this heater if it has been dropped
21. Do **NOT** use this heater if there are visible signs of damage to the heater
22. Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
23. **WARNING:** To reduce the risk of fire, keep textiles, curtains or any other flammable material a minimum distance of 1m away from the air outlet.
24. Do **NOT** attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.
25. **CAUTION:** It is not recommended to use this appliance with an extension lead where possible as they may overheat and cause a fire risk.

- 26. If using an extension lead, please ensure that you do not exceed the maximum rated running wattage / load of the extension lead and ensure to monitor the appliance carefully.
- 27. Disconnect from mains when not in use or when moving or cleaning.
- 28. Do **NOT** use this appliance with an external programmer, timer switch or any other device which would switch the appliance on automatically, unless this is pre-built into the appliance from the manufacturer.
- 29. Do **NOT** operate this appliance with wet hands.
- 30. Do **NOT** allow water, or other liquids to run into the interior of the appliance, as this could create a fire and/or electrical hazard.
- 31. Do **NOT** use this appliance while sleeping, or place it near a person who is sleeping.
- 32. Do **NOT** use this appliance near petrol, paints, flammable gases, ovens or other heating sources.

PRODUCT OVERVIEW

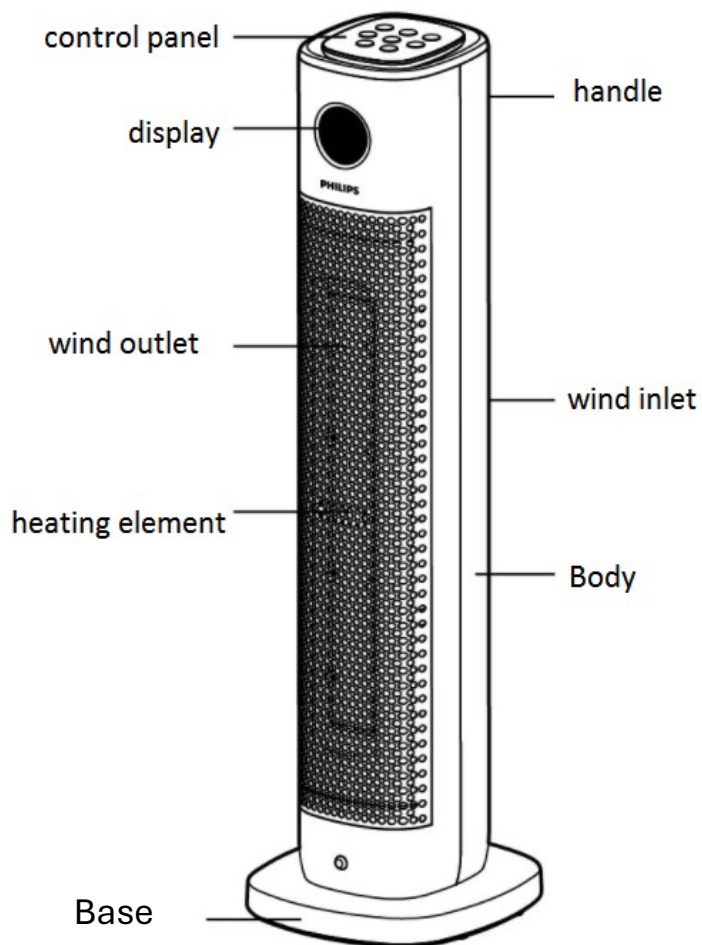

USAGE INSTRUCTIONS

1. Place the product in an upright position on a flat, steady, stable, heat-resistant surface. Make sure there are no flammable or heat sensitive items within 1 meter (40") of the appliance. Operating the appliance contrary to this could cause a hazard.

2. Then Insert the plug into a suitable wall outlet, After powering on, the device will enter **standby mode**.

3. Press the **Power** button  to start the fan, cold air will start to blow.

NOTE: The Cold air function is only used to assist with heat dissipation (Cooling) of the body of the appliance.

Pressing the POWER button once again will switch the cold air fan off.

4. You can then switch on the heating function of the appliance by pressing the  Button. The first press will engage "Low Heat" mode (1d). The second press will increase to "High Heat", (2d) and finally a third press will switch the appliance off.

NOTE: When shutdown is activated, there is a 30 second switch-off delay.

5. You can also utilise the  button to activate the left and right oscillation function of the heater.

6. Pressing the  button will activate the auto-off timer. This can be set from 1-9 hours time. Each press of the button will add an additional 1 hour to the timer.

NOTE: The timer has a corresponding display on the control panel to display the timer length.

7. Pressing the  button will switch off all indicator displays of the device. You can press any button to redisplay the indicator lights.

NOTE: The remote control and control panel have the same control functions.

8. Press the “+” “-” buttons to enter temperature target mode. The ambient temperature target can be increased/decreased by pressing “+” “-” The heater will work to get the room temperature to the set target.

NOTE: When the indoor temperature is HIGHER than the set temperature – the heating function will not start.

7. Press and hold the  button for 3 seconds to activate the child lock function. Once the child lock is turned on, all other buttons will be are unresponsive. The same process can be followed to deactivate child lock

NOTE: When the heating mechanism is engaged, there is a 30 second shutdown delay when switching off the device.

REMOTE CONTROL

Press the  button on the remote control to engage Low Heat Mode (1d) and press  to engage high heat mode (2d).

All other buttons on the remote control are the same as the control panel.

VOICE CONTROL

This unit has built in voice control which can be utilised without WiFi or Bluetooth connectivity. Simply say “**Hey Heater**” followed by one of the below commands for the desired action:

Desired Action	Voice Command
Activate Fan	“Turn on” or “Power on”
De-activate Fan NOTE: The fan will continue to run for 30s after	“Shut Down” / “Power off” / “Turn off” or “Heat off”
High Heat Setting*	“High Heat” or “Heat Up”
Low Heat Setting*	“Low Heat” or “Heat Down”
Turn Off Heating	“Heat off”
Decrease Volume Output	“Volume Down”
Increase Volume Output	“Volume Up”
Increase Volume to Maximum	“Volume all the way up”
Decrease Volume to Minimum	“Volume all the way down”
Switch off Voice Feedback	“Voice Response off”
Switch on Voice Feedback	“Voice Response on”
Start Oscillation	“Rotate on” or “Rotation on”
Stop Oscillation	“Rotate off” or “Rotation off”
Set Timer	“Set Timer for X** Hours”

Cancel Timer	"Cancel The Timer"
Switch off Voice Control	"Voice Control OFF"
Switch on Voice Control	"Voice Control ON"
Turn off the display	"Display OFF"
Turn on the display	"Display ON"
Turn on child lock	"Child Lock ON"
Turn off child lock	"Child Lock OFF"
Set Target Temperature (15-45°C)	"X** Degrees"

For Example, if you wanted to deactivate the Heaters Voice Feedback, you would say "Hey Heater, Voice Response Off"

NOTE: After 7 seconds of inactivity, the voice control function will switch off, at which point you will need to repeat "Hey Heater" in order to reactivate voice commands.

***NOTE:** High & Low Heat settings can only be activated AFTER the fan has been activated. So to switch the appliance on to high heat, you would need to say the commands "Hey Heater, Turn on, High Heat."

****NOTE:** For Timer, Replace "X" with the number of hours (1-9) you would like to set the timer for.

For Temperature Target, replace "X" with the desired temperature you would like to set.

E.g. "Hey Heater, Set Timer for 2 hours" or "Hey Heater, 30 degrees"

SAFETY FEATURES

This PTC Heater is fitted with an overheat protection switch (thermal cut-out) as well as a Tip-Over Cut Out which will power the appliance off automatically in case of overheating or if the appliance is not standing upright.

Should the overheat cut out occur, unplug the appliance and allow it to cool fully for at least 30 minutes.

Follow the operation instructions to restart the appliance after removing the source of the overheating (Poor Ventilation, item covering the heater etc.)

The heater should then function normally. In case the problem persists, please contact Air Pro Customer Support.

To avoid damage and to regulate temperature, this PTC Heater is also fitted a thermostatic safety device. The safety device will activate and cut out the power to the heater once a certain temperature is reached. The heater will then start again automatically once the temperature has lowered.

This item is also fitted with an automatic tip-over cut off.

This will cut the power to the heater if it is knocked over.

If this occurs, disconnect the item at the times to allow it to cool, before then attempting to move the heater. Inspect the heater for damage. If – the heater is free from damage, plug back into the mains. The heater should function as normal.

MAINTENANCE & DISPOSAL

CAUTION: Before Cleaning, switch off the heater and disconnect it from the power socket, wait for the heater to cool completely before cleaning.

Vacuum-clean the vents to remove dust and debris from these areas.

To remove dust on external surfaces, wipe the heater with a clean lint-free cloth with a small amount of neutral detergent.

CAUTION: Do **NOT** use any harsh detergent or abrasive cleaners.

WARNING! Do **NOT** spray with liquids or submerge in any liquid or water.

WARNING! Do **NOT** attempt to clean the inside of the heater.

Do **NOT** attempt to open the casing at any time. There are no user serviceable parts inside.

Where possible, please recycle this appliance at end of life. Check with your local authority for recycling advice and facility locations.



If further assistance is required, or you face difficulty when using this device, please contact our support team by emailing support@airprohome.com

You can also contact us by scanning the QR Code below

