


air pro

8L AIR COOLER

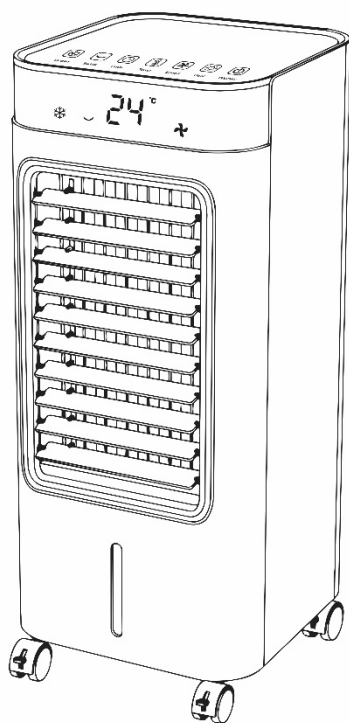


AP0303 | AP0304

AIRPROHOME.COM

**PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE
USE & RETAIN THIS MANUAL FOR FUTURE REFERENCE.**

This product comes with a standard 1 year manufacturer
warranty.

This can be extended up to 2 years by scanning below.

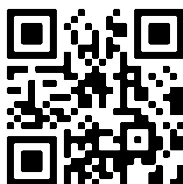

TECHNICAL DATA

Rated Power – 80W

Rated Voltage – 220-240V~

Rated Frequency – 50-60Hz

Water Capacity – 8L

Net Weight – 3.6kg

Gross Weight – 4.4kg

Suitable For – 20-25m²

Model – BL-238DLR

SAFETY WARNINGS

- This appliance is not intended for use by children. Children must not play with the appliance. Cleaning and maintenance must not be carried out by children.
- For additional protection, it is advisable to install a residual current device (RCD) with a rated residual operating current not exceeding 30mA in the electrical circuit. Please consult your installer for further advice.
- If the power cord is damaged, it must be replaced by the manufacturer, an authorised service department, or a similarly qualified professional in order to avoid risk of injury or hazard.
- This appliance is not intended to be operated via an external timer or separate remote-control system.
- Only the appropriate connector must be used.
- Do not use attachments that are not recommended or supplied for use with this product.
- Disconnect the appliance from the power supply when leaving it unattended, and before assembling, disassembling, or cleaning.
- Do not remove the water tank before unplugging the power cord.
- Do not insert objects into, or allow objects to enter, any ventilation or exhaust opening, as this may

damage the product and could cause electric shock or fire.

- Do not operate the unit with a cover placed over it, as this may cause overheating and motor damage.
- Do not add any chemical substances or metal objects into the water tank. These can be hazardous and may cause damage to the appliance.
- Infants, elderly persons, and individuals in poor health should not be exposed directly to the airflow from the fan for extended periods of time.
- Do not unplug the appliance from the electrical outlet with wet hands.
- Do not use the appliance near water or in wet or damp environments such as bathrooms or areas exposed to rain.
- Do not submerge the appliance or allow water to enter the electrical components.
- Ensure that the voltage and frequency of your power supply match the rating specified on the appliance label before use.
- Always place the appliance on a stable, flat surface before use.
- Do not move the appliance while it is in operation.

- Do not drop or subject the appliance to strong impacts, as this may cause damage or create a safety hazard.
- Only use the appliance for its intended purpose as an air cooler.
- Do not attempt to repair the appliance yourself. Always consult a qualified technician for servicing or repairs.
- Inspect the appliance for signs of damage before each use. Do not operate the appliance if it appears damaged.
- Do not place the appliance directly against a wall or in an enclosed space. Maintain adequate clearance on all sides for proper airflow. Do not block the air intake or outlet during operation.
- Do not position the appliance so that the airflow is directed at electrical outlets or other electrical appliances.
- For best performance, use the appliance in a well-ventilated room.
- Use only clean, fresh water in the water tank. Do not use hot water, saltwater, or any other liquids.
- Do not overfill the water tank. Always observe the maximum fill line marked on the tank.

- If the appliance is not going to be used for an extended period, empty and thoroughly dry the water tank to prevent the growth of mould and bacteria.
- Clean the water tank regularly to prevent the build-up of bacteria, algae, or limescale.
- Clean or replace the cooling filter/pad regularly in accordance with the manufacturer's guidance. A dirty filter reduces efficiency and may harbour harmful bacteria. Do not operate the appliance without the filter in place.
- If the unit has an ice compartment, only use regular water ice. Do not use dry ice or any chemical cooling agents.
- When not in use, store the appliance in a dry place away from direct sunlight.


ASSEMBLY INSTRUCTIONS

ASSEMBLY OF THE AIR COOLER

1. Carefully remove the packaging, taking care not to damage the plastic body with scissors or a knife.
2. **Fitting the wheels:** Attach all four wheels to the holes located at the base of the air cooler. Press each wheel firmly into place until securely fitted.
3. Place the unit on a stable, flat surface, keeping it away from sources of heat and open flames.
4. **Filling the water tank:** Turn the water tank lock to the horizontal position and remove the water tank. Place the ice boxes inside and fill with clean tap water. Ensure the water level does not exceed the "MAX" marker located on the back of the tank.
5. Slide the water tank back into its housing and turn the tank lock to the vertical position to secure it.

Insert the plug into the electrical outlet. The unit will emit a beep and enter standby mode. All functions can be controlled using either the control panel or the remote control.

CONTROL SETTINGS

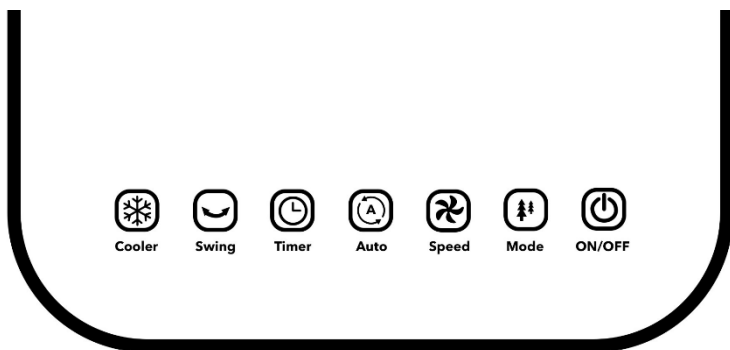

1. **ON/OFF:** Press the "ON/OFF" button on the control panel or remote control to turn the unit on. The unit will start at low speed in normal wind mode. Press the "ON/OFF" button again at any time to return the unit to standby mode.
2. **Mode:** Press the "Wind" button to select a wind mode. There are three modes available: Normal, Nature, and Sleep. Each press will cycle to the next mode, indicated by the corresponding light on the display.

Normal Mode: Provides a continuous airflow that can be adjusted to low, medium, or high speed.

Nature Mode: Simulates natural airflow for a soft and comfortable breeze. Available at low, medium, and high speeds.

Sleep Mode: Designed for quiet, comfortable operation during sleep.

When in High speed: The cooler will operate in natural wind mode for 30 minutes, it will then switch fan speed to medium for a further 30 minutes. Finally, the appliance will then change to low speed, where it will continue to operate until powered off.

3. **Speed:** Wind speed can be adjusted across three levels — Low, Medium, and High — by pressing the "Speed" button. Each press will advance to the next speed level, indicated by the corresponding light on the display.
4. **Auto:** Selecting "Auto" will simultaneously activate the highest wind speed, as well as the cooler and swing functions
5. **Timer:** Press the "Timer" button to set a run time of between 1 and 7 hours, after which the unit will automatically switch to standby. Each press increases the timer by one hour, shown on the display. To cancel the timer, continue pressing the button until the timer indicator turns off.
6. **Swing:** Press the "Swing" button to activate the oscillation function. The air control blades will begin moving left and right to distribute airflow across the room. Press the button again to stop oscillation. Please note that the vertical direction of the air control blades must be adjusted manually.

7. **Cooler:** Press the "Cooler" button to activate the cooling function. The water pump will draw water from the tank and distribute it over the cooling pad. The pad absorbs heat from the water, and the fan blows the resulting cooled air into the room, producing a refreshing cooling effect.

Caution: If the water level is low or the tank is empty, the cooler indicator will flash and the unit will emit warning beeps when the "Cooler" button is pressed. Check the water level and refill as needed, then press the "Cooler" button again to reactivate the function. It is recommended to replace the water in the tank with fresh water at least once a week.

7. **Remote control:** The remote control uses a CR2025 button cell battery. Before use, remove the protective card inserted at the bottom of the remote control.

OPERATING THE WATER TANK

Check the water level in the tank regularly. Ensure the water level does not fall below the "MIN" marker on the water tank.

Before refilling, switch the unit off by pressing the power switch on the back panel, and unplug the power cord from the electrical outlet.

USING THE ICE BOXES

To enhance the cooling effect, you can use the ice boxes supplied with the unit. Before use, place them in the freezer compartment of a refrigerator for a few hours. Once frozen, place them into the large section of the water tank and fill with water up to the "MAX" level. Using the ice boxes will lower the temperature of the airflow, providing a more effective cooling effect.

CLEANING & MAINTENANCE

After prolonged use, dust accumulated in the dust filter or on the cooling pad may restrict airflow. It is therefore recommended that you clean the unit regularly. Please follow the steps below.

Always turn the unit off and unplug the power cord before carrying out any cleaning or maintenance.

DUST FILTER

To remove the dust filter, first remove the screw, then press the clips on both sides simultaneously and pull the filter out. Clean the filter using a soft brush and a mild, neutral cleaning agent to remove any dust and dirt. To refit the filter, insert the bottom edge first, then press the upper section firmly until it clicks securely into place.

COOLING PAD

Once the dust filter has been removed, the cooling pad will be visible. Press the clip in the centre and gently pull the pad out. Use a clean, soft brush to remove dust and dirt from the pad. Rinse with water if necessary and allow to dry fully in open air before refitting. Never use chemical cleaning products on the cooling pad, as these may cause damage.

WATER TANK

Turn the water tank lock to the horizontal position and remove the tank. Clean the interior using a mild, soft cleaning agent, then rinse thoroughly with water. Once clean, return the tank to its housing and turn the lock to the vertical position to secure it.

EXTERIOR CLEANING

Clean the outer casing of the unit with a soft, damp cloth. Do not clean the control panel with a damp cloth — see caution note below. Never use abrasive or harsh cleaning products, as these may damage the casing. Ensure the unit is completely dry before switching it back on.

Caution: Never allow water to come into contact with the control panel. Always clean the control panel with a soft, dry cloth only.

Where possible, please recycle this appliance at end of life.
Check with your local authority for recycling advice and facility locations.



If further assistance is required, or you face difficulty when using this device, please contact our support team by emailing support@airprohome.com

You can also contact us by scanning the QR Code below

