 


air pro

6L TOWER AIR COOLER

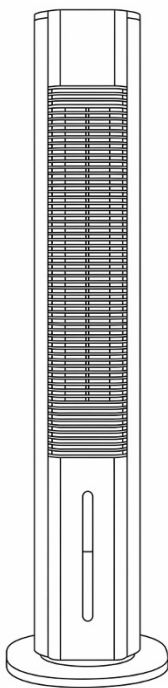

AP0308

AIRPROHOME.COM

**PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE
USE & RETAIN THIS MANUAL FOR FUTURE REFERENCE.**

This product comes with a standard 1 year manufacturer
warranty.

This can be extended up to 2 years by scanning below.



TECHNICAL DATA

Rated Power – 80W

Rated Voltage – 220-240V

Rated Frequency – 50Hz

Water Capacity – 6L

Model – BL-SD2-D

This evaporative air cooler is specially designed to provide effective cooling performance. It can reduce the outlet air temperature by using the natural process of water evaporation, which helps cool the surrounding air while also contributing to reduced environmental impact.

The evaporative air cooler must not be used in enclosed or poorly ventilated spaces. For optimal operation, place the unit near an open window or door to allow adequate airflow and to create a “flow-through” ventilation effect, which enhances cooling efficiency.

For best performance, fill the water tank with clean water before use. Adding ice, if available, can further improve the cooling effect. This product is suitable for use in a variety of climatic conditions and is designed to create a comfortable and refreshing indoor environment.

SAFETY WARNINGS:

When using electrical appliances, basic safety precautions must always be followed to reduce the risk of fire, electric shock, and personal injury.

WARNING

To avoid the risk of electric shock, fire, or injury:

 
1. Always switch the appliance off, unplug it from the electrical outlet, and empty the water tank before handling, cleaning, or servicing.
2. Use this appliance only as described in this manual. Any use not recommended by the manufacturer may result in fire, electric shock, or injury.
3. This appliance is intended for indoor household use only and similar applications. Do not use outdoors.
4. Do not use the appliance to dry clothes.
5. Never leave the appliance unattended while in use.
6. Always turn the appliance off and disconnect it from the power supply when not in use.
7. A slight odour may be noticeable during the first few minutes of initial use. This is normal and will quickly disappear.
8. Place the appliance on a flat, stable, and dry surface.
9. Always keep the appliance in an upright position. Opening or operating it in any other position may cause a hazard.
10. Maintain a minimum clearance of 50 cm around all sides of the appliance.
11. Do not place anything on top of the appliance.

12. Do not cover the appliance or obstruct the air vents or openings.
13. Do not insert objects into the vents or openings, as this may cause electric shock, fire, or damage.
14. Ensure the mains power supply (voltage, frequency, and power) matches the rating label on the appliance.
15. Always plug the appliance directly into a wall socket. Avoid using extension leads, as they may overheat and cause a fire risk.
16. To prevent circuit overload, do not operate another high-wattage appliance on the same electrical circuit.
17. Do not use the appliance with an external timer, programmer, or automatic switching device unless it is built into the appliance by the manufacturer.
18. Do not pull on the power cord.
19. Never move, carry, or hang the appliance by the power cord.
20. Do not kink, wrap, or tightly coil the power cord around the appliance.
21. Ensure the power cord does not hang over edges or create a tripping hazard.
22. Do not place the power cord under carpets, rugs, or runners.
23. If the power cord is damaged, it must be replaced by the manufacturer, an authorised service agent, or a similarly qualified person.
24. Do not immerse the appliance in water.
25. Do not operate the appliance with wet hands.



26. Do not fill the water tank while the appliance is plugged into the electrical outlet.
27. Do not allow water or other liquids to enter the interior of the appliance.
28. Do not use the appliance near water, baths, showers, swimming pools, or where it may fall into water.
29. Dispose of water held in the appliance regularly. This water is not drinkable.
30. Only fill the water tank and supplied ice packs with fresh water.
31. Do not puncture or attempt to open the ice packs.
32. Condensation may form on the outside of the water tank when ice packs are used. Clean up any water immediately to prevent slipping hazards.
33. Keep the appliance out of reach of children and pets.
34. Do not leave children unattended in the area where the appliance is in use.
35. Children must be supervised to ensure they do not play with the appliance.
36. Cleaning and maintenance must not be carried out by children unless continuously supervised.
37. This appliance may be used by children aged 8 years and above, and by persons with reduced physical, sensory, or mental capabilities, provided they are supervised or instructed on safe use and understand the hazards involved.
38. Do not operate the appliance with the water tank removed.

39. Do not operate the appliance with any safety guards removed.
40. Do not use the appliance if it shows signs of damage or if accessories are damaged.
41. Do not attempt to repair or adjust electrical or mechanical components. This is unsafe and will void the warranty.
42. Do not use the appliance near petrol, paints, flammable gases, ovens, or other heat sources.

PRODUCT OVERVIEW

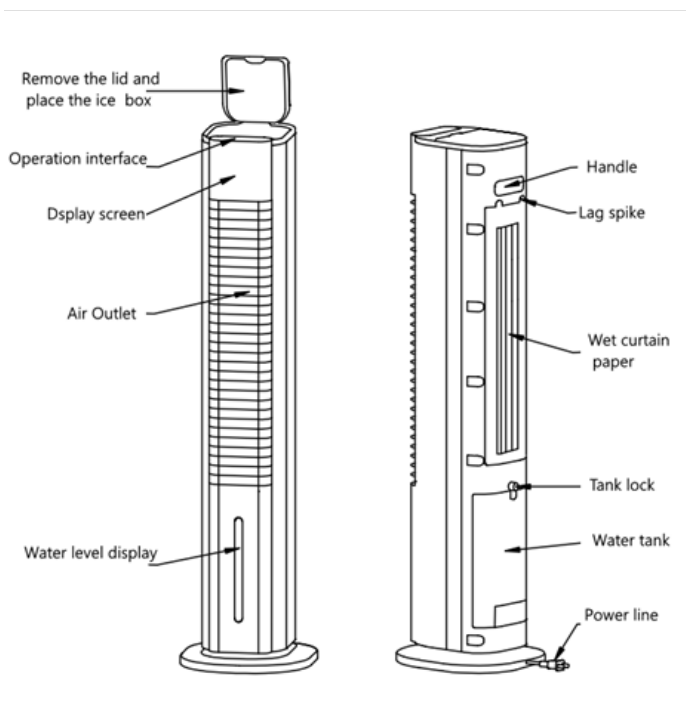

USAGE INSTRUCTIONS

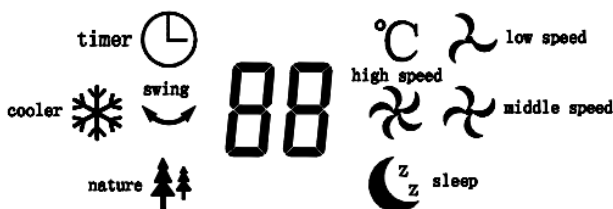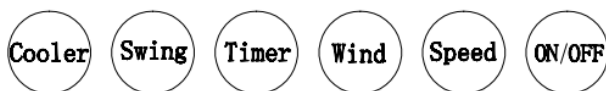  

Plug the appliance into a suitable electrical outlet.

The LED display will automatically show the room temperature, and the fan will enter standby mode. All functions can be operated using either the control panel on the unit or via the remote control.

POWER:

Press the ON/OFF button on the control panel, or the the remote control, to turn the unit on.

The fan will start at medium speed. After a few minutes, it will automatically reduce to a lower speed or switch to the previously saved (pre-programmed) setting.

To switch the unit back to standby mode, press the ON /OFF button once again.

FAN SPEED:

Press the “Speed” button to select High, Medium, or Low fan speed.

Each press of the button cycles through the available speeds.

The corresponding speed icon will be displayed on the LED screen.

WIND MODE:

Press the Wind button to select the desired airflow mode. The indicator light will show the selected mode.

Normal Mode:

Provides a continuous airflow that can be adjusted to low, medium, or high speed.

Natural Mode:

Simulates natural airflow for a soft and comfortable breeze. Available at low, medium, and high speeds.

Sleep Mode:

Designed for quiet, comfortable operation during sleep.

When in High speed: The cooler will operate in natural wind mode for 30 minutes, it will then switch fan speed to medium for a further 30 minutes. Finally, the appliance will then change to low speed, where it will continue to operate until powered off.

When operating at medium speed: The cooler will operate in natural wind mode for 30 minutes, then it will switch to low speed and continues operating until powered off.

When operating in Low speed: The cooler will continues operating in low speed until powered off.

TIMER:

Press the Timer button to set an automatic switch off time from 1 to 12 hours.

The indicator light will display the selected duration, and the unit will automatically turn off when the preset time has elapsed.

Press the button repeatedly to select the desired duration, each press of the button will add +1 hour to the timer.

To cancel the timer, press the Timer button until the display shows “00”.

SWING:

Press the Swing button to activate oscillation and change the horizontal airflow direction. The swing icon will appear on the display when this function is active.

Press the button again to stop oscillation.

The vertical airflow direction can be adjusted manually by tilting the outlet louvers up or down.

COOLER:

Press the Cooler button to activate the air-cooling function.

The water pump will draw water from the water tank and circulate it over the cooling pad.

As air passes through the cooling pad, heat is absorbed and evaporated air is expelled by the fan, producing a cooler and more refreshing airflow.

CAUTION:

- Check the water level in the tank regularly. Ensure that the water level does not fall below the “MIN” marking located on the water tank. Activating the Cool function with an insufficient amount of water may cause damage to the water pump and will void the product warranty.
- Always check the water level before use and add clean water if necessary.
- Before refilling the water tank, switch the unit off using the power switch located on the rear panel, and unplug the power cord from the electrical outlet.

ICE PACKS:

To enhance the performance of the cooler, you may use the ice packs supplied with the unit.

Before use, place the ice packs in the freezer for several hours until fully frozen.

Once frozen, place the ice packs into the top ice pack section of the cooler, and fill the water tank up with water to the “**MAX**” level.

Using the ice packs lowers the temperature of the airflow, providing a stronger and more effective cooling effect.

REMOTE CONTROL:

The remote control operates using a CR-2025 battery. Always point the remote control toward the control panel when operating the unit.

If the remote control does not work, check and replace the battery if required. If the appliance will not be used for an extended period, remove the battery from the remote control to prevent damage caused by battery leakage.

 WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

MAINTENANCE & DISPOSAL

CAUTION: Before Cleaning, switch off the cooler and disconnect it from the power socket.

Vacuum-clean the vents to remove dust and debris from these areas.

Dust may accumulate in the dust filter and cooling pad over time, which can reduce the performance of the air cooler. To ensure efficient operation, it is recommended to clean the evaporative cooler regularly. Follow the steps below to clean the unit.

Dust Filter:

Remove the dust filter from the unit.

Use a mild cleaning agent and a soft brush to gently remove dust and dirt from the filter.

After cleaning, reinstall the filter by first securing the bottom part, then pushing the upper part into place until it is properly fixed.

Cooling Pad:

After removing the dust filter, the cooling pad will be visible.

Press the locking tab located in the centre and gently pull the cooling pad out.

Use a clean cloth or soft brush to remove dust and dirt from the pad.

If necessary, rinse the pad with clean water and allow it to air-dry completely before reinstalling.

The cooler draws water from the narrow section of the water tank and pumps it onto the cooling pad. As water flows through the pad, it returns to the larger section of the tank. This process helps trap dust and dirt particles from the air, resulting in cleaner and fresher airflow.

A water filter located in the centre of the water tank cleans the circulating water and must always be correctly installed before operating the unit.

CAUTION: Do **NOT** use any harsh detergent or abrasive cleaners.

WARNING! Do **NOT** spray with liquids or submerge in any liquid or water.

WARNING! Do **NOT** attempt to clean the inside of the cooler.

Where possible, please recycle this appliance at end of life. Check with your local authority for recycling advice and facility locations.



If further assistance is required, or you face difficulty when using this device, please contact our support team by emailing support@airprohome.com

You can also contact us by scanning the QR Code below

