 


air pro

12" DESK FAN

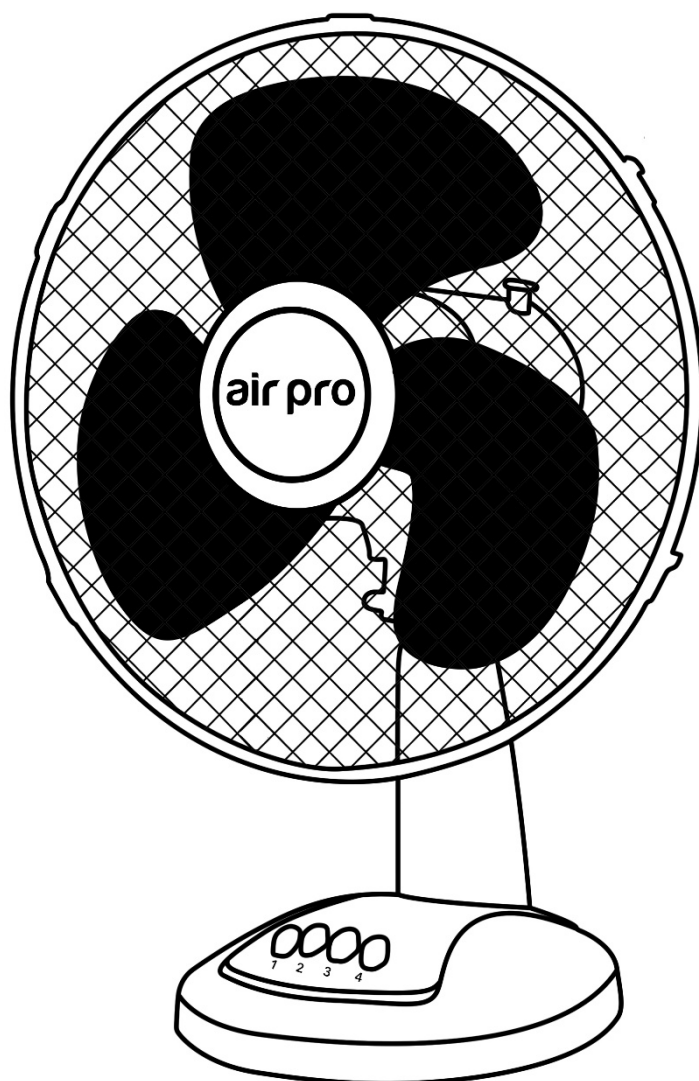


AIRPROHOME.COM

PLEASE KEEP THIS MANUAL SAFE FOR FUTURE REFERENCE!

Thank you for selecting this Air Pro Desk Fan. Be sure to read this manual carefully before using your new product. Protect yourself and those around you by observing all safety information. Failure to comply with these instructions could result in personal injury and/or property damage.

If assistance is required, please contact our support team by emailing support@airprohome.com

You can also contact us by scanning the QR code below

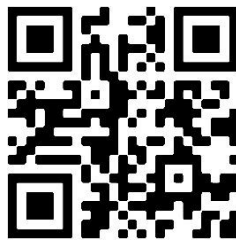

Model No: FT-30II
SKU: AP0313, AP0314 & AP0315
220-240V A.C 50Hz 40W

Note: The specifications and/or components of this appliance are subject to change without prior notice

SAFETY INSTRUCTIONS

Please ensure this product is installed correctly according to the instructions, and the following instructions are strictly adhered to. Failure to do so may result in electric shock, fire, personal injury, or other damage.


- This product is for household use **ONLY**.
- Do **NOT** operate this product if the front grille is not installed or if the fan blades are loose or detached.
- Do **NOT** insert fingers or foreign objects into the grille or moving fan blades.
- Do **NOT** allow children or anyone who has not read this manual to operate this product.
- Keep hair, clothing, and other loose items away from the fan to prevent them from getting caught.
- Cleaning and user maintenance should not be undertaken by children.
- Do **NOT** manually swing the fan head, as this may damage the internal transmission mechanism.
- Do **NOT** lean on the fan or tilt it while it is operating.
- Ensure that the mains cable is fully extended before use, and arrange it so that it is not in contact with any part of the appliance
- This product is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or by those lacking experience or knowledge, unless they are supervised or instructed by someone responsible for their safety.
- If the product supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use this fan in the immediate surroundings of a bath, shower or swimming pool.
- Do **NOT** pull on the power cord. Never move, carry or hang the appliance by the power cord.
- Do **NOT** use this appliance in high humidity or steam-filled rooms
- Avoid placing the power cord in areas where it can become a trip hazard.
- Do **NOT** place the power cord under carpeting, or cover it with rugs, runners or similar items.
- Do **NOT** use this fan if there are visible signs of damage to the fan or its parts
- Do **NOT** attempt to repair, disassemble or modify the appliance.
- Disconnect from mains when not in use or when moving or cleaning.

- Do **NOT** use this appliance with an external programmer, timer switch or any other device which would switch the appliance on automatically, unless this is pre-built into the appliance from the manufacturer.
- Do **NOT** operate this appliance with wet hands.
- Do **NOT** allow water, or other liquids to run into the interior of the appliance, as this could create a fire and/or electrical hazard.
- Using the main unit button to shut down does not completely switch off the product. Unplug the power cord if not in use for an extended period.

WARNING: To reduce the risk of fire, keep textiles, curtains or any other flammable material a minimum distance of 1m away from the air outlet.

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

COMPONENTS

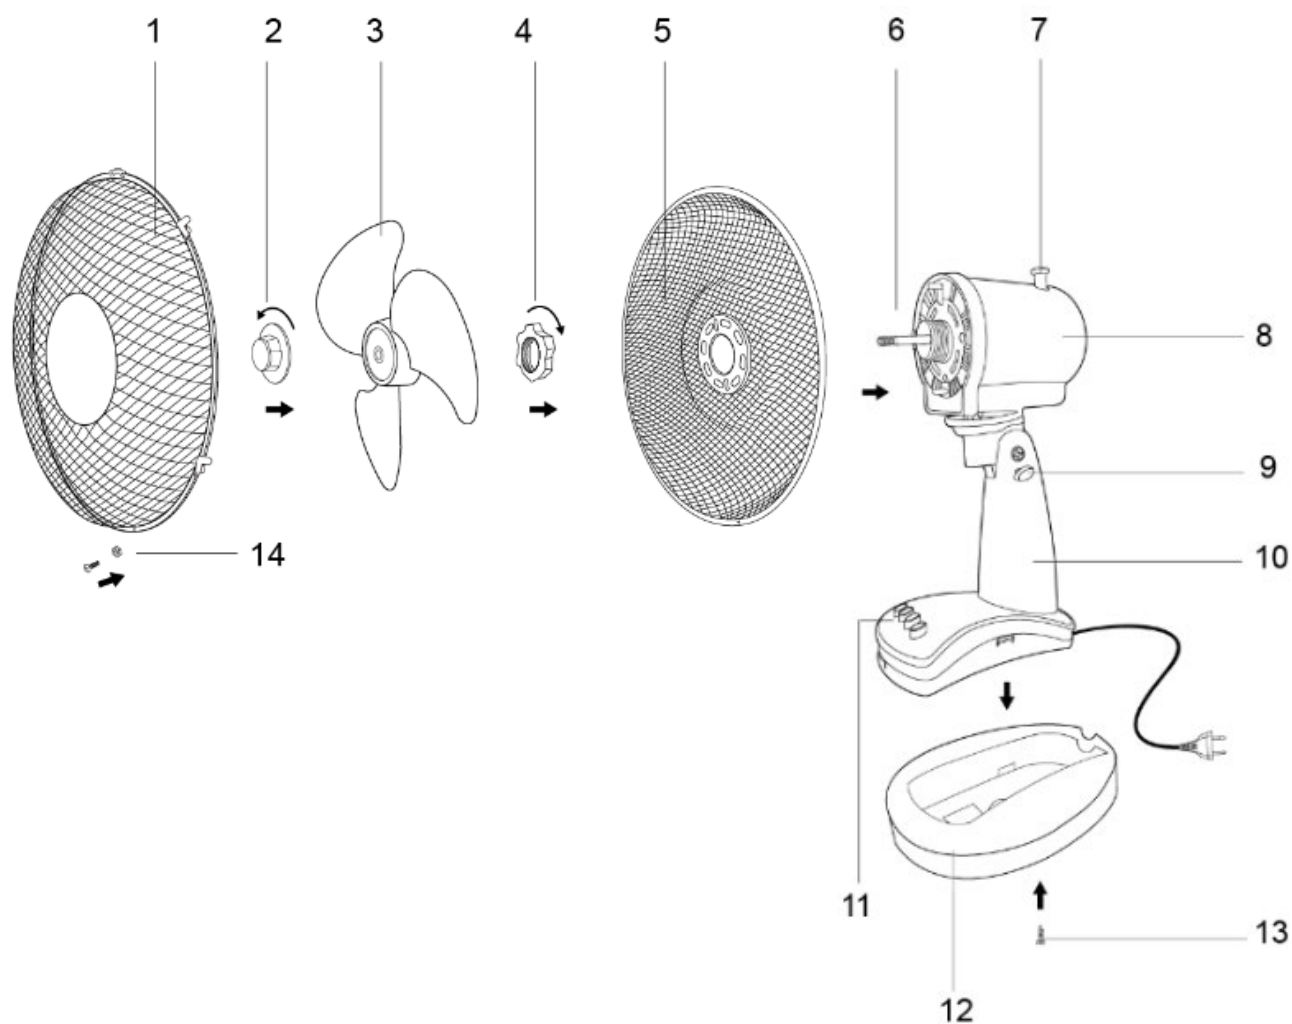


1	Front Grille	8	Motor Housing
2	Blade Cap	9	Tilt Adjust Knob
3	Fan Blade	10	Control box
4	Plastic Mounting Nut	11	Speed Control
5	Rear Grille	12	Base
6	Motor Shaft	13	Base Screw Fix
7	Oscillation Knob	14	Safety Nut & Screw

PRODUCT ASSEMBLY

ASSEMBLY OF BASE

- The fan control box must be fitted to the base of the fan before the fan is used.
- Remove the bag containing the screws and position the control box on the base and snap into place. Ensure that the base is clipped firmly into position onto the fan base and screw the base fix screw into the holes across the middle of the base. Do not over-tighten the screws.

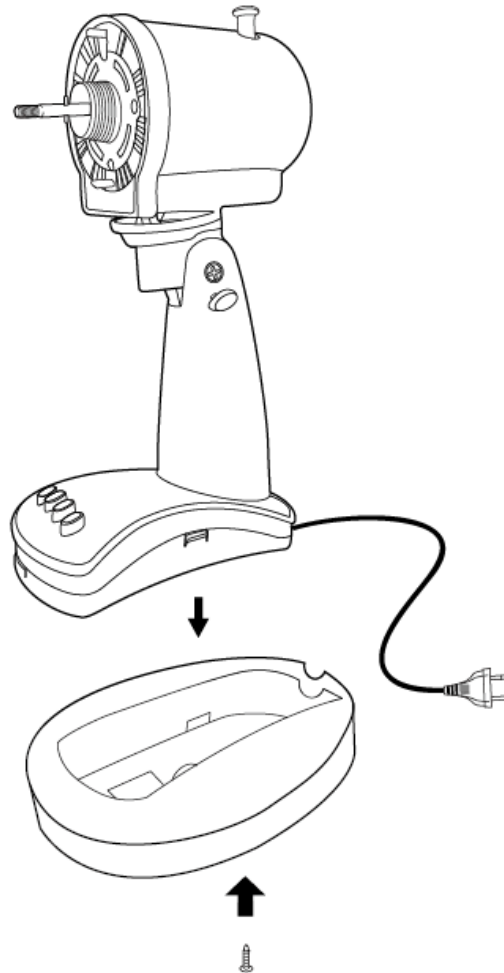

ASSEMBLY OF BLADE AND GRILLE

- To assemble the safety grille and blade, remove the blade cap (by turning it clockwise), then the plastic mounting nut (by turning it anticlockwise) from the motor shaft.
- Place the back safety grille into position. Ensure the rear grille fits onto the lugs (Fig. 1). If this is done correctly, the safety grille's carry handle will be at the top.
- Fix the safety grille into position by replacing the locking nut tightly by hand (Fig. 1). Do not force the locking nut.
- The groove in the center of the fan blade aligns with a T-bar on the motor spindle to ensure correct positioning.
- Fix the blade into place by gently hand tightening the spinner (Fig.2) anticlockwise onto

the end of the motor shaft. The spinner is self-tightening, so do not force it.

- Lift out all locking clips on the front safety grille (Fig 3).
- Place the safety grille into position and secure it by fastening the clips over the outer rim. The screw and nut at the bottom of the grille must be fitted (Fig. 4).



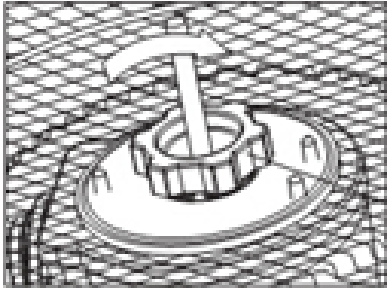


Fig.1 Locking lugs & locking nut
Locking nut


Fig. 2 Spinner tighten anti-clockwise

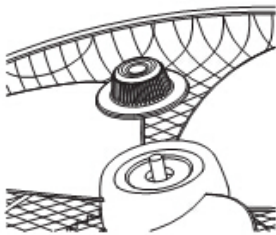

(Fig. 3)

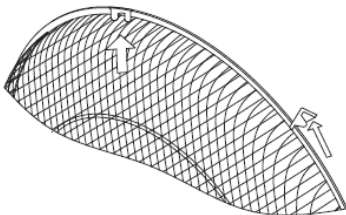

(Fig. 4)

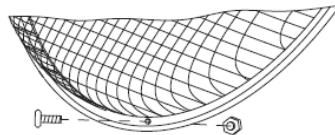

INSTRUCTIONS FOR USE

- Place your fan on a level and dry surface.
- Plug the fan into a mains socket. Select the desired speed setting. There are 4 settings – 0 (off), 1 (low), 2 (medium) and 3 (high).
- The fan can be set to oscillate by flicking the oscillating knob downwards. To stop the oscillating feature, flick the knob upwards again.
- To adjust the tilt angle of fan head, loosen the neck screw, swivel the fan to the desired angle and then re-tighten the screw.

CAUTION

- Select a suitable location for the fan, in accordance with the safety recommendations outlined.

- When placing a fan on a table or shelf, ensure that the power cord does not dangle, to prevent the unit falling.
- Do not hang or mount the fan on a wall or ceiling.
- Remove the cable tie and unravel the power cord before operation.

MAINTENANCE & CARE

Switch off and unplug from the power supply before assembling or disassembling and cleaning.

Keep the air vents at the rear of the unit free from dust or fluff– use a vacuum cleaner to remove these when necessary. Do not probe any opening to remove fluff.

Fan component parts should be cleaned using mild soap and a damp cloth or sponge. Do not allow any water or other liquid to enter the motor housing.

Thoroughly remove soap film with clean water.

CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the fan components.

If further assistance is required, please contact our support team by emailing
support@airprohome.com

You can also contact us by scanning the QR code below

