


air pro

16" STAND FAN

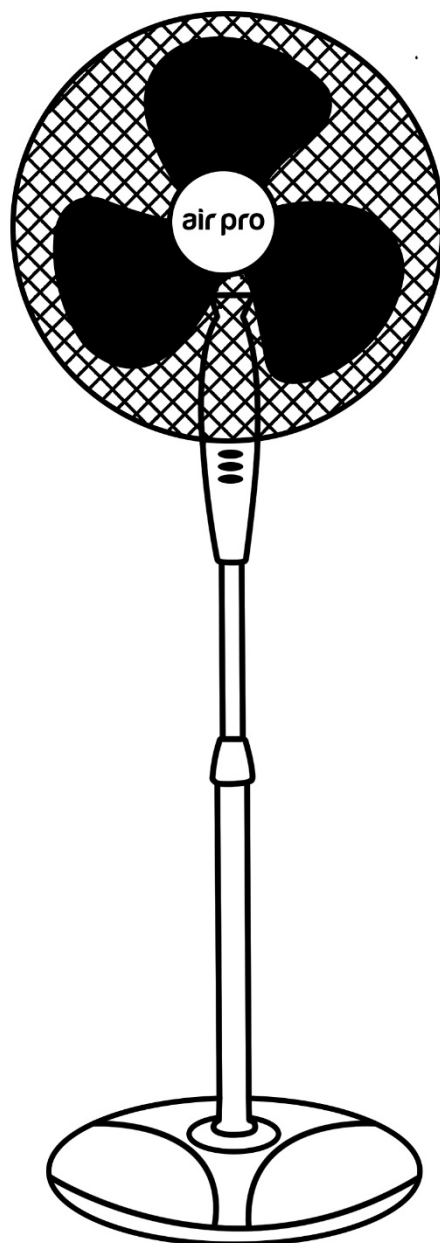

AIRPROHOME.COM

PLEASE KEEP THIS MANUAL SAFE FOR FUTURE REFERENCE!

Thank you for selecting this Air Pro Stand Fan. Be sure to read this manual carefully before using your new product. Protect yourself and those around you by observing all safety information. Failure to comply with these instructions could result in personal injury and/or property damage.

This product comes with a standard 1 year manufacturer warranty.
This can be extended up to 2 years by scanning below.



Model No: RD-40B
SKU: AP0316, AP0317 & AP0318
220-240V A.C 50Hz 120W

Note: The specifications and/or components of this appliance are subject to change without prior notice

SAFETY INSTRUCTIONS

When using the electrical appliance, the following basic safety precautions should always be followed.


WARNING: To reduce the risk of fire, electric shock or injury to persons or property:

- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Do not use this fan with any solid-state speed control device to reduce the risk of electric shock.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible by their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the fan running unattended.
- Do not operate the product if it is dropped, damaged or showing signs of product malfunction. Do not operate the product with a damaged plug or cord. Return the complete product to the place of purchase for inspection, refund or replacement.
- If it is not working properly, contact a qualified electrician or service center for examination and repair, never try to dismantle it by yourself.
- Do not immerse or expose the product or flexible cord to rain, moisture or any other liquid.
- This product should not be used in the immediate vicinity of water, such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
- Never install the unit where it could be subject to:
 - Heat sources such as radiators, heat registers, stoves or other products that produce heat
 - Direct sunlight
 - Mechanical vibration or shock
 - Excessive dust
 - Lack of ventilation, such as a cabinet or bookcase
 - Uneven surface
- Switch off and unplug from outlet when the product is not in use, before assembling or disassembling parts and before cleaning. Fully assemble the fan before switching on.
- Avoid contact with moving parts. Do not insert any body parts (e.g. finger) or objects through the grill when the fan is operating.

- Do not cover the grille, or operate in close proximity to curtains, etc.
- This product is intended for normal domestic/household use only.
- Always disconnect the fan when moving it from one location to another.
- The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
- Be sure fan is on a stable surface when operating to avoid overturning.
- Do not immerse in water.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent, or similarly qualified person to avoid a hazard.

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

COMPONENTS

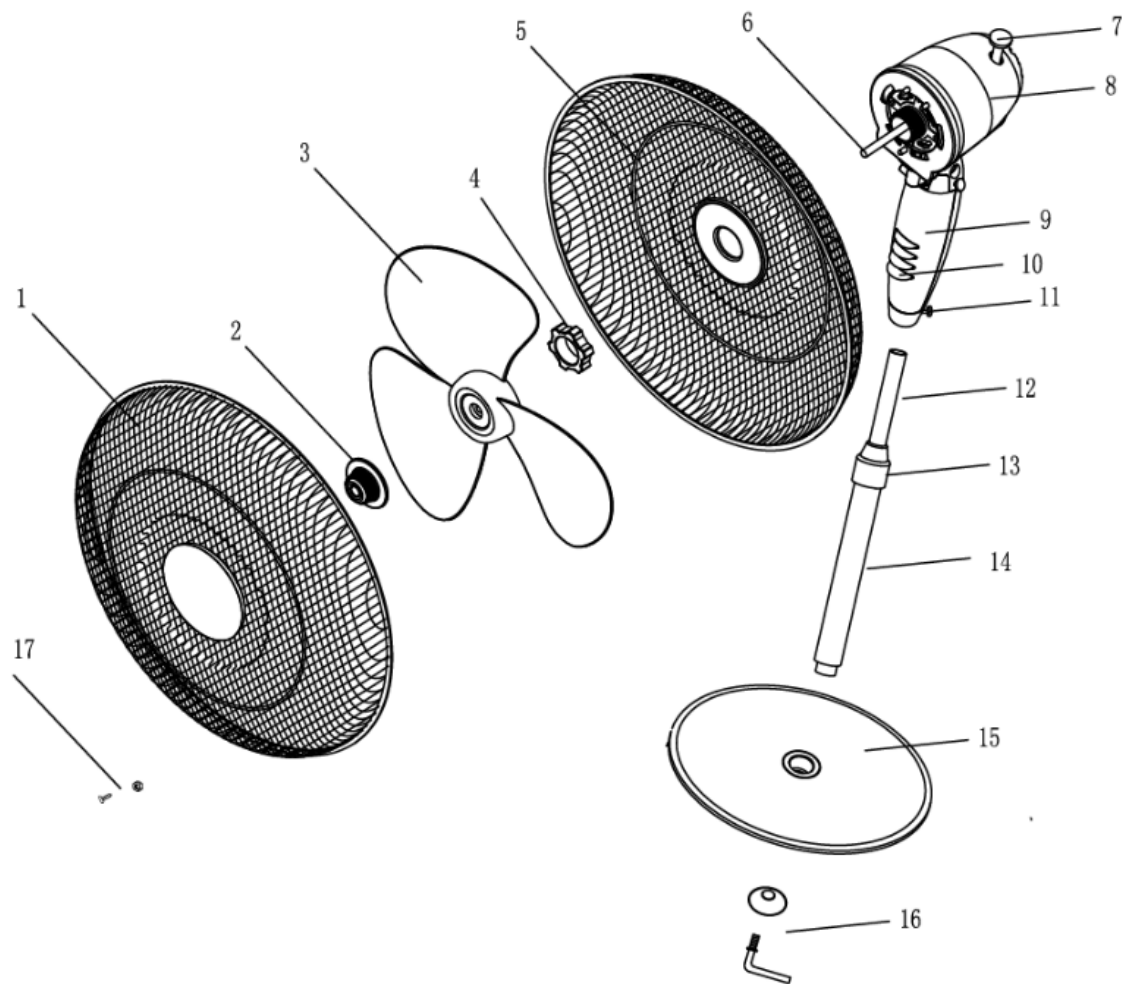

1	Front Grille	10	Speed Knob
2	Blade Cap	11	Set Screw
3	Fan Blade	12	Inner Tube
4	Plastic Fastening Nut	13	Height Adjustable Collar
5	Rear Grille	14	Outer Tube
6	Motor Shaft	15	Round Base
7	Oscillation Knob	16	L Type Screw & Washer
8	Motor Housing	17	Safety Screw & Nut
9	Control Box		

PRODUCT ASSEMBLY

ASSEMBLY OF BASE

- Loosen the L type screw & washer from the bottom of outer tube
- Place outer tube with pipe support on round base and fix with the L type screw & washer
- Attach the motor with switch compartment onto the inner pipe. Ensure the control box is pushed fully onto the inner pipe and secured with the set screw provided.

ASSEMBLY OF BLADE AND GRILLE

- Unscrew the plastic mounting nut from the front of the motor housing by rotating it anticlockwise.
- Position the rear grille against the front of the motor housing with the handle, ensuring that the locating pegs on the motor housing are engaged correctly in the holes of the rear grille.
- Tighten the rear grille mounting nut clockwise. DO NOT OVERTIGHTEN IT.
- Push the fan blade onto the motor shaft, locating the slot at the back of the blade on the drive pin that passes through the motor shaft.
- Tighten the blade cap by turning it anticlockwise.
- Position the front grille against the rear grille so that the holes in the rims that accept the small nut and bolt are in line. Insert the bolt through the holes and screw on the nut. Do not fully tighten at the stage.
- Push the grille by retaining clips into position ensuring that they engage correctly on the rim of the grille.
- Fully tighten the small nut and bolt that passes through the rim of the grille.

INSTRUCTIONS FOR USE

- Place your fan on a level and dry surface.
- Plug the fan into a mains socket. Select the desired speed setting. There are 4 settings – 0 (off), 1 (low), 2 (medium) and 3 (high).
- The fan can be set to oscillate by flicking the oscillating knob downwards. To stop the oscillating feature, flick the knob upwards again.
- To adjust the tilt angle of fan head, swivel the fan to the desired angle. The fan should always be switched off when making this adjustment.

MAINTENANCE & CARE

- Switch off and unplug from the power supply before assembling or disassembling and cleaning.
- Keep the air vents at the rear of the main body free from dust or fluff. Use a vacuum cleaner to remove these when necessary. Do not probe any opening to remove fluff.
- Fan component parts should be cleaned using mild soap and a damp cloth or sponge. Do not allow any water or other liquid to enter the motor housing.
- Thoroughly remove soap film with clean water.

If further assistance is required, please contact our support team by emailing
support@airprohome.com

You can also contact us by scanning the QR code below

