尺寸：145x210mm 2025.11.21

AIR PRO 7” DESK FAN

AP0247 | AP0248 | AP0249

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USE & RETAIN THIS MANUAL FOR FUTURE REFERENCE.

This product comes with a standard 1 year manufacturer warranty.

This can be extended up to 2 years by scanning below.

TECHNICAL DATA

Rated Power – 45W

Rated Voltage – 220-240V

Rated Frequency – 50-60Hz

Model – FT1608Y

SAFETY WARNINGS:

Please ensure this product is installed correctly according to the instructions, and the following instructions are strictly adhered to. Failure to do so may result in electric shock, fire, personal injury, or other damage.

1. This product is for household use **ONLY.**
2. Do **NOT** operate this product if the front grille is not installed or if the fan blades are loose or detached.
3. Do **NOT** insert fingers or foreign objects into the grille or moving fan blades.
4. Do **NOT** allow children or anyone who has not read this manual to operate this product.
5. Keep hair, clothing, and other loose items away from the fan to prevent them from getting caught.
6. Cleaning and user maintenance should not be undertaken by children.
7. Do **NOT** manually swing the fan head, as this may damage the internal transmission mechanism.
8. Do **NOT** lean on the fan or tilt it while it is operating.

9. Ensure that the mains cable is fully extended before use, and arrange it so that it is not in contact with any part of the appliance
10. This product is not intended for use by individuals (including children) with reduced physical, sensory, or mental capabilities, or by those lacking experience or knowledge, unless they are supervised or instructed by someone responsible for their safety.
11. If the product supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
12. Do not use this fan in the immediate surroundings of a bath, shower or swimming pool.
13. Do **NOT** pull on the power cord. Never move, carry or hang the appliance by the power cord.
14. Do **NOT** use this appliance in high humidity or steam-filled rooms
15. Avoid placing the power cord in areas where it can become a trip hazard.
16. Do **NOT** place the power cord under carpeting, or cover it with rugs, runners or similar items.

17. Do **NOT** use this fan if there are visible signs of damage to the fan or it’s parts
18. **WARNING:** To reduce the risk of fire, keep textiles, curtains or any other flammable material a minimum distance of 1m away from the air outlet.
19. Do **NOT** attempt to repair, disassemble or modify the appliance.
20. Disconnect from mains when not in use or when moving or cleaning.
21. Do **NOT** use this appliance with an external programmer, timer switch or any other device which would switch the appliance on automatically, unless this is pre-built into the appliance from the manufacturer.
22. Do **NOT** operate this appliance with wet hands.
23. Do **NOT** allow water, or other liquids to run into the interior of the appliance, as this could create a fire and/or electrical hazard.
24. Using the main unit button or the remote control to shut down does not completely switch off the product. Unplug the power cord if not in use for an extended period.

PRODUCT OVERVIEW

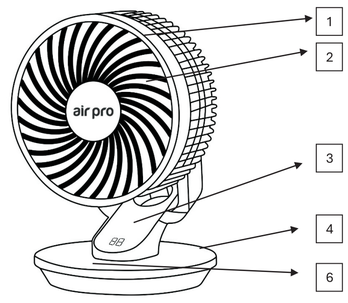

1. Front Grille
2. Fan Blades
3. LED Display
4. Base
5. Timer
6. Touch Controls

USAGE INSTRUCTIONS

Before use, ensure that all components are intact, and check that the fan blades are not damaged or loose.

1. Place the product in an upright position on a flat, steady, stable surface & connect the power supply

When the unit is powered on, a buzzer will beeps once.

2. Press the button to start circulating fan. The default setting is speed 3.

3. Pressing the button once more will enter the fan into standby mode.

4. Press the button to cycle through the different fan speeds F3, F4, F5, F6

5. Press the button to adjust the auto-off timer from 1-12hours.

6. This fan has 3 mode settings available:

Natural: Natural mode will increase and decrease fan speed intermittently, mimicking a natural breeze.

Regular: Regular mode will consistently blow at the set fan level setting.

Sleep: Sleep mode will reduce the current speed level by one level every 30 minutes until reaching Speed level 1. It will then continually operate at minimum speed.

6. Pressing the key once will activate left/right oscillation, and pressing the button will activate up/down oscillation. Pressing either key for the second time will deactivate the respective oscillation function, and the oscillation position for up/down or left/right will be frozen in place .

TIP: When deactivating oscillation, make sure to deactivate each individual oscillation function when the fan is in your desired final resting position.

REMOTE CONTROL

The icons and functions on the remote control are the same as those shown on the main control panel. Each button on the remote corresponds directly to a control previously described, allowing you to operate the fan with the same features and settings from a distance.

NOTE: Before using the remote control, ensure to remove the insulating sheet from the battery section first.

Replacing the remote control battery:

1. Press the tab buckle to to open the battery slot on the remote control.

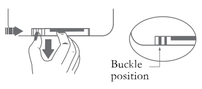

2. Insert the CR2025 battery, with the “+” side facing up, as shown.

3. Reinsert the battery slot into the remote control

NOTES:

1. Do NOT charge this battery.
2. Keep out of the reach of children. If swallowed, seek medical attention immediately.
3. When operating this fan with the remote control, always aim the remote at the LED display
4. Due to frequency overlap, keepo the remote control away from other electrical appliances to avoid mis-operation.
5. Remove the batteries from the remote control if not in use for an extended period of time.

VOICE CONTROL

This unit has built in voice control which can be utilised without WiFi or Bluetooth connectivity. Simply say **“Hey Desk Fan”** or **“Hi Desk Fan**” followed by one of the below commands for the desired action:

Desired Action	Voice Command
Fan ON	Power on
Fan OFF	Shut down / Fan OFF
Set to Speed 1-6	Speed X
Speed Increased	Speed Up
Speed Decreased	Slow Down
Horizontal Oscillation Activated	Horizontal Oscillation ON
Horizontal Oscillation deactivated	Horizontal Oscillation OFF

Vertical Oscillation Activated	Vertical Oscillation OFF
Vertical Oscillation Deactivated	Vertical Oscillation ON
Hour Timer Set	Set X Hour Timer
Timer OFF	Timer Off
Display ON	Wake up
Display OFF	Sleep
Maximum Speed Active	Maximum Speed
Minimum Speed Active	Minimum Speed
Volume Increased	Volume Up
Volume Decreased	Volume Down
Volume at Maximum	Maximum Volume
Sound Muted	Mute

For Example, if you wanted to mute the Fans sound Feedback, you would say “Hey Desk Fan, Mute”

NOTE: After 15 seconds of inactivity, the voice control function will switch off, at which point you will need to repeat “Hey Desk Fan” in order to reactivate voice commands.

***NOTE:** For Speed, Replace “X” with the fan speed (1-6) you would like to set the fan at.

For Timer, replace “X” with the number of hours (1-12) you would like the fan to switch off after

E.g. “Hey Desk Fan, Set 2 hour timer” or “Hey desk fan, Speed 5”

MAINTENANCE & DISPOSAL

CAUTION: Before Cleaning, switch off the fan and disconnect it from the power socket, wait for the fans to stop turning completely before cleaning.

Vacuum-clean the vents to remove dust and debris from these areas.

To remove dust on external surfaces, wipe the fan with a damp (not wet) lint-free cloth, rinsed in a neutral detergent only.

CAUTION: Do **NOT** use any harsh detergent or abrasive cleaners.

WARNING! Do **NOT** spray with liquids or submerge in any liquid or water.

Where possible, please recycle this appliance at end of life. Check with your local authority for recycling advice and facility locations.

If further assistance is required, or you face difficulty when using this device, please contact our support team by emailing support@airprohome.com

You can also contact us by scanning the QR Code below